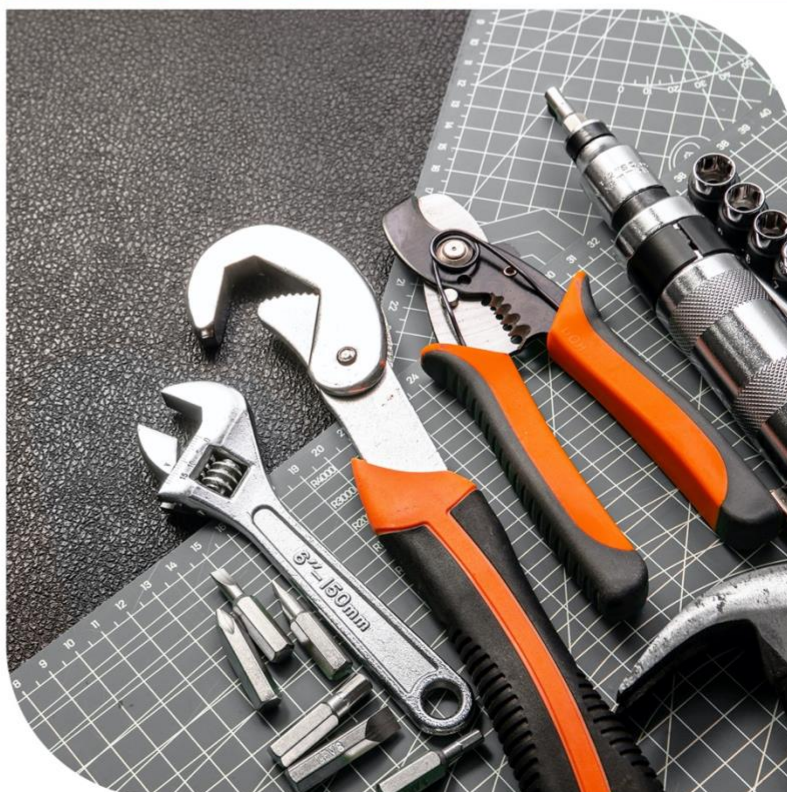
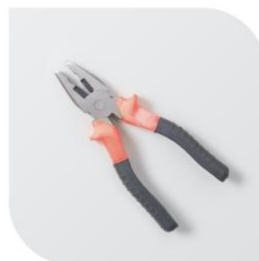


Stellar227

Indoor 2x250mW gNB

Installation Guide



About This Document

This document is intended for personnel who will be installing the Baicells Stellar227 Indoor 2x250mW gNB product. The product overview is followed by the procedures for properly installing. Please be advised that only personnel with the appropriate electrical skills and experience should install this device.

Copyright Notice

Baicells Technologies, Inc., copyrights the information in this document. No part of this document may be reproduced in any form or means without the prior written consent of Baicells Technologies, Inc.

Disclaimer

The information in this document is subject to change at any time without notice. For more information, please consult with a Baicells technical engineer or the support team.



Disposal of Electronic and Electrical Waste

Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

Revision Record

Date	Version	Description
30 Dec., 2023	01	Initial Released.

Contact Us


	Baicells Technologies Co., Ltd.	Baicells Technologies North America, Inc.
	China	North America
Address	9-10F, 1st Bldg., No.81BeiqingRoad, Haidian District, Beijing, China	555 Republic Dr., #200, Plano, TX 75074, USA
Phone	400-108-0167	+1-888-502-5585
Email	contact@Baicells.com or support@Baicells.com	sales_na@Baicells.com or support_na@Baicells.com
Website	www.Baicells.com	https://na.Baicells.com


Safety Information


For the safety of installation personnel and for the protection of the equipment from damage, please read all safety warnings. If you have any questions concerning the warnings, before installing or powering on the base station contact the Baicells support team.

 **Warning** IMPORTANT SAFETY INSTRUCTIONS

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

 **Warning** Read the installation instructions before you connect the system to its power source.

 **Warning** Installation of the equipment must comply with local and national electrical codes.

 **Warning** This product relies on the existing building or structure for short-circuit (overcurrent) protection. Ensure that the protective device is rated no greater than 20A.


 **Warning** Do not operate this wireless network device near unshielded blasting caps or in an explosive environment unless the device has been modified and qualified for such use.

Table of Contents

1. Overview.....	1
1.1 Introduction	1
1.2 Highlights.....	1
1.3 Appearance	2
1.4 Technical Specification.....	3
1.4.1 Technology	3
1.4.2 Interface	3
1.4.3 Performance	4
1.4.4 Features.....	5
1.4.5 Link Budget.....	5
1.4.6 Physical	5
2. Installation Preparation	7
2.1 Packing List.....	7
2.2 Support Materials.....	7
2.3 Installation Tools	7
2.4 Construction Safety.....	7
2.5 Installation Environment.....	8
3. Installation.....	9
3.1 Ceiling or Wall Mounting	9
3.2 Connect Cables.....	10
3.3 Power on to Check LED Status	11

List of Figures

Figure 1-1 Stellar227 Appearance2

List of Tables

Table 1-1 Stellar227 Interface Description2
Table 1-2 Stellar227 Interface Indicators2
Table 2-1 Supporting Materials7

1. Overview

1.1 Introduction

The Baicells Stellar227 is an advanced indoor 5G Sub-6G integrated base station (gNB), which is designed and developed based on Qualcomm 5G SoC solution. This 2x250mW gNB is low power, subminiature and easy to maintenance.

This product helps operators to enhance the coverage performance of 5G networks effectively, improve the capacity of 5G networks and eliminate the blind district, meanwhile it also can help to reduce the system power consumption.

1.2 Highlights


- Standard NR Band n78/n41/n48
- Comply with 3GPP Release 15 and Release 16
- GUI-based local and remote Web management
- Supports 100MHz bandwidth per cell
- Peak rate: Up to DL 850Mbps* and UL 600Mbps
- Supports 128 RRC connected users per cell
- Supports Stand Alone (SA) mode
- Supports F1 setting*
- Supports SCTP control (IKE SCTP)
- Supports embedded 5G core network (HaloB)
- Integrated small cell form factor for quick and easy installation
- Supports flexible xHaul
- Highly secured with equipment certification against potential intrusion risk
- Supports TR-069 network management interface
- Lower power consumption, which reduces OPEX

* Planned for future release

1.3 Appearance

The appearance of Stellar227 is shown in Figure 1-1.

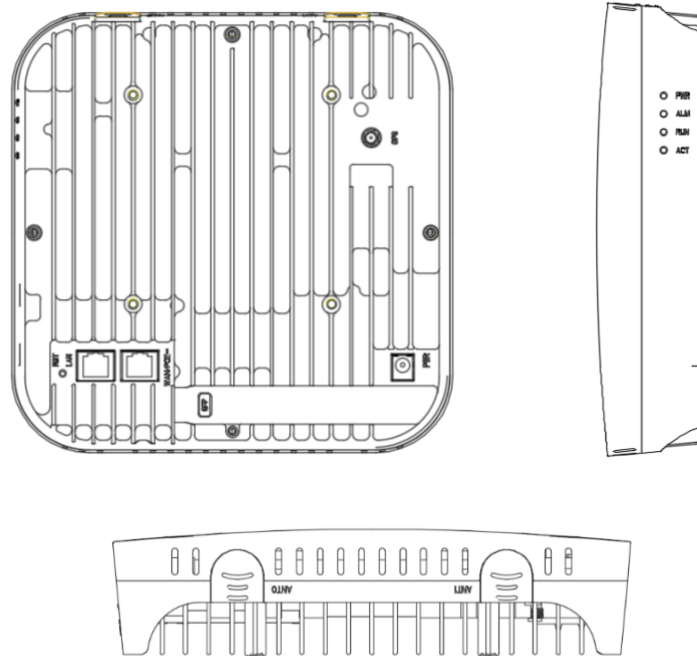Figure 1-1 Stellar227 Appearance



The Stellar227 interfaces are described in Table 1-1.

Table 1-1 Stellar227 Interface Description

Interface	Description
PWR	12VDC power supply interface
LAN	RJ-45 interface (GE), used for initial configuration or maintenance during device operation
WAN/POE++	RJ-45 interface (GE), used for data backhaul and PoE++ power supply, complied with IEEE 802.3bt standard.
SFP	Optical interface (SFP) 0, used for data backhaul
GPS	External GPS antenna interface 1, SMA (F) connector
RST	Power reset button
ANT0	(optional) External antenna interface 0, SMA (F) connector
ANT1	(optional) External antenna interface 1, SMA (F) connector

The Stellar227 interface indicators are described in Table 1-2.

Table 1-2 Stellar227 Interface Indicators

Identity	Color	Status	Description
----------	-------	--------	-------------

PWR	Green	Steady ON	(Reserved)
RUN	Green	Steady ON	The power supply is normal.
		Fast flash: 0.125s on, 0.125s off	The device is starting up.
		Slow flash: 1s on, 1s off	The device is operating normally.
		OFF	No power supply or device fault.
ACT	Green	Steady ON	The cell is active.
		Slow flash: 1s on, 1s off	The cell is deactivated.
ALM	Red	Steady ON	The device is fault.
		OFF	No alarm.

1.4 Technical Specification

1.4.1 Technology

Item	Description
Standard	5G NR TDD (3GPP R15 & R16 compliant)
TDD UL/DL Configuration	5ms periodicity ($\mu=1$): DDDDD+DDSUU 5ms periodicity ($\mu=1$): DDDDD+SUUUU* 2.5ms dual periodicity ($\mu=1$): DDDSU+DDSUU 2.5ms single periodicity ($\mu=1$): DDDSU*, DSUUU
Frequency Band	n41 (2496 MHz – 2690 MHz) n48 (3550 MHz – 3700 MHz) n78 (3300 MHz – 3800 MHz)
Channel Bandwidth	n41: 100MHz n48: 10/20/30/40MHz n78: 10/20/30/40/50/60/80/90/100MHz
Multiplexing	2x2 MIMO (DL)
Security	Radio: SNOW 3G/AES-128 Backhaul: IPsec (X.509 AES-128, AES-256, SHA-128, SHA-256)

1.4.2 Interface

Item	Description
Ethernet Interface	2 x RJ-45 Ethernet interface (1 GE) 1 x 1GE optical interface (SFP) 1 x 10GE optical interface (SFP+)

Item	Description
Power Supply	12VDC/POE++
Protocols Used	IPv4, UDP, TCP, ICMP, NTP, SSH, IPsec, TR-069, HTTP/HTTPS, DHCP
Network Management	IPv4, HTTP/HTTPS, TR-069, SSH, Embedded EPC
VLAN/VxLAN*	802.IQ/VxLAN
LED Indicators	4 x status LED PWR/ACT/RUN/ALM
RF Antenna	Embedded omni antenna or 2T2R external high gain antenna with SMA connectors
GPS Antenna	External GPS antenna, SMA connector

1.4.3 Performance

Item	Description		
Peak Data Rate	100 MHz	DL (Mbps)	UL (Mbps)
	5ms periodicity (DDDDD+DDSUU ,6:4:4)	810	210
	5ms periodicity (DDDDD+SUUUU ,6:4:4)*	525	400
	2.5ms dual periodicity (DDDSU+DDSUU, 10:2:2)	720	330
	2.5ms single periodicity (DDDSU, 10:2:2)*	850	210
	2.5ms single periodicity (DSUUU, 10:2:2)	380	600
User Capacity	Up to 128 RRC connected users		
MAX Deployment Range	2000 m ²		
Latency	Round-trip delay (RTD) less than 10 milliseconds		
Receive Sensitivity	-92 dBm (per channel)		
Modulation	UL: MCS0 (QPSK) to MCS27 (256QAM) DL: MCS0 (QPSK) to MCS27 (256QAM)		
Transmit Power Range	0 to 24 dBm per channel (combined 27dBm, configurable) (1 dB interval)		
Quality of Service	Nine-level priority indicated by QoS Class Identifiers (QCI)		
ARQ/HARQ	Supported		
Synchronization	GPS/NL/1588v2		

NOTE: The test method of receiving sensitivity is proposed by the 3GPP TS 36.104, which is based on

5MHz bandwidth, FRC A1-3 in Annex A.1 (QPSK, R=1/3, 25RB) standard.

* Planned for future release

1.4.4 Features

Item	Description
Voice	VoNR/EPS-FB
SON	Self-Organizing Network <ul style="list-style-type: none"> • Automatic Neighbor Relation (ANR) • PCI confliction detection
Traffic Offload	Local breakout
Maintenance	<ul style="list-style-type: none"> • Local/Remote Web maintenance • Online status management • Performance statistics • Fault management • Local/Remote software upgrade • Logging • Connectivity diagnosis • Auto startup

1.4.5 Link Budget

Item	Description
VSWR	≤ 1.5
EIRP	Antenna gain = 4 dBi ERIP= (27+4)dBm/100MHz
Power Control	UL Open-loop/Closed-loop Power Control, DL Power Allocation (3GPP TS 38.213 compliant)*

* Planned for future release

1.4.6 Physical

Item	Description
Surge Suppression	Yes
Power Interface	Differential mode: ± 10 KA
Lightning Protection	Common mode: ± 20 KA
MTBF	≥ 150000 hours
MTTR	≤ 1 hour
Ingress Protection	IP30

Item	Description
Rating	
Operating Temperature	-5°C to 45°C
Storage Temperature	-20°C to 65°C
Humidity	15% to 85% RH
Atmospheric Pressure	70 kPa to 106 kPa
Power Consumption	Maximum 30W
Weight	< 2.4 lbs/ 1.1kg
Dimensions (HxWxD)	7.9 x 7.9 x 1.9 inches / 200 x 200 x 49 millimeters
Installation	Ceiling or wall mount

2. Installation Preparation

2.1 Packing List



Before opening the box, make sure the package is in good condition, undamaged and not wet. During the unpacking, avoid potential damaging impacts from hits or excessive force.

Once unpacked, check the contents to see if they are consistent with the packing list.

2.2 Support Materials

In addition to industry standard tools, you will need the materials described in Table 2-1 during the installation.



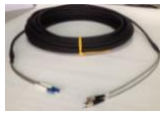

Table 2-1 Supporting Materials

Item	Figure	Description
Optical fiber		Optical fiber (armor) It is suggested that the diameter of the cable is 7 ± 1 mm.
Ethernet cable		Outdoor CAT6, shorter than 100 meters (~109 yards) It is suggested that the diameter of the cable is 7 ± 1 mm.

NOTE: Other accessories have been packed in the packing box.

2.3 Installation Tools

The following standard tools may be needed during the installation.

			
Marker pen	Percussion drill	Cross screw driver	hammer

NOTE: Other accessories have been packed in the packing box.

2.4 Construction Safety

1. The installation personnel must master the basic safe operation knowledge, through the training, and having the corresponding qualifications.

2. Before installation, the installation personnel must be prepared with safety protection, such as: safety helmet, safety belt, reflective clothing, gloves, and safety shoes, etc.
3. Before installation, the installation personnel must cross-check each other to ensure above preparations have done.

2.5 Installation Environment

To get the signal coverage effect best, please place the Neutrino base station in an unobstructed space.

3. Installation

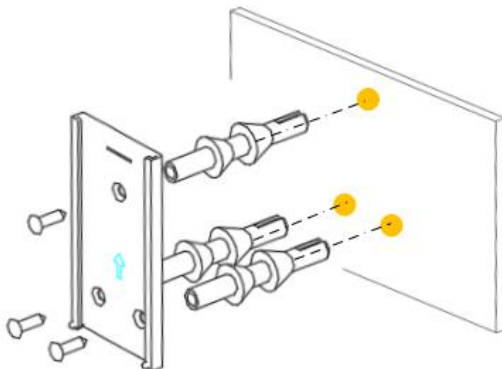
3.1 Ceiling or Wall Mounting

Attention:


- The thickness of ceiling is not less than 18mm, and bearing more than 5kgs. If the strength is not suitable, the device may fall off.
 - If the ceiling is made of unstable material, such as gypsum, this ceiling installation is not recommended. If the device must be installed on ceiling due to environment restriction, add one layer better panel under screws to make sure the device is fastness.
-

Here take mounting on wall as an example, mounting on ceiling is the same as it.


1. Put the bracket against the wall and mark the position, and then drill three holes. Later install expansion pipe, bracket and tighten with screws.



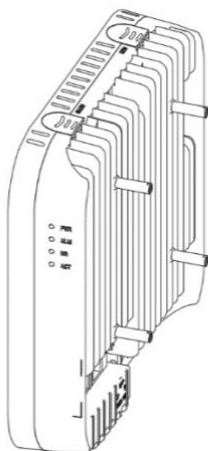
2. Install four screw bolts on the back of the gNB and tighten these screw bolts.



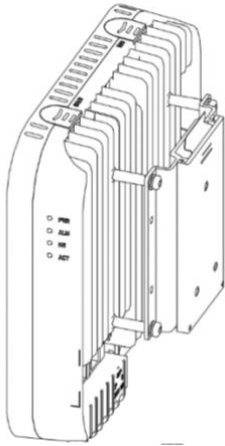3. Install the bracket on the back of the gNB with screws and tighten these screws.



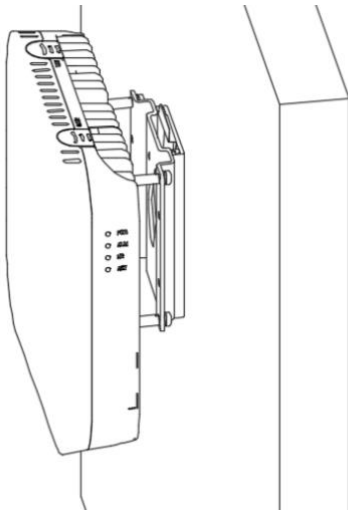4. Put the gNB from top to bottom along the slot and push it to the bottom, and then clamp the spring sheet.



3.2 Connect Cables

1. Connect power adaptor to **PWR** port and the other end connects to AC power.
2. Connect Ethernet cable to **WAN/POE++** port and the other end connects to the web client.
When the installation site has POE switch, the POE++ supply can be adopted.

The POE switch should meet the POE++ requirements for the BT protocol, with a power of 30 watts or higher.

3. Connect optical fiber to **SFP** port and the other end connects to the gateway device.
4. (optional) Connect **ANT0/ANT1** to external antenna with SMA connector.

By default, the built-in antennas are used.

3.3 Power on to Check LED Status

Power on the gNB, and wait a few minutes while the gNB boots up. Per the previous Table 1-2 in “1.3 Appearance”, check that the LED indicators are lighting as expected.