



**5G NR Small Cell
SCE2120 User Guide
(Model: NR xCell 46116A)**

**ASKEY COMPUTER CORPORATION
July 2023**

Copyright Notice

Askey owns the copyright to the information in this document. No part of this document may be reproduced in any form or by any means without the prior written consent of Askey.

Disclaimer

The information in this document is subject to change without notice. Askey is not responsible for any errors contained herein. For more information, please consult an Askey technical engineer or support team. Please see the "Contact Us" section below.

Revision History

Version	Date	Description

Contact us

Askey Computer Corp.

Address : 10F, NO.119, Jiankang Road, Zhonghe District, New Taipei City 23585 TAIWAN, R.O.C.

TEL : +886-2-2228-7588

E-mail: sales@askey.com

Internet Address: <https://www.askey.com.tw/>

Security Information

For the safety of installation engineers and to protect the equipment from damage, please read all safety warnings carefully. If you have any questions about these warnings, please contact the Askey support team before installing or powering up the base station.

Contents

Chapter 1	Introduction	1
1.1	Brief Introduction	1
1.2	Specification	1
1.3	What's in The Box	2
1.4	IO Interfaces	3
Chapter 2	Setup	5
2.1	Setup Procedure	5
2.2	Cable Connection.....	5
2.3	LED Status.....	6
2.4	Installation.....	8
2.5	Route the Cables.....	16
Chapter 3	The Askey 5G NR Small Cell Admin Website	17
3.1	Admin Website Overview	19
3.2	Home	23
3.3	Connected Devices	23
3.4	Settings.....	25
3.5	Configuration.....	37
3.6	About.....	63
Chapter 4	The Askey 5G NR Small Cell Support Utilities	66
4.1	Small Cell Log Download Mechanism	66
4.2	Access the Admin Website by IPv6 Link-Local Address	67
4.3	The Recommend NR ARFCN Configuration	68

List of Figures

Figure 1. Askey 5G NR Indoor Small Cell SCE2120	1
Figure 2. IO Interfaces	3
Figure 3. Setup Procedure	5
Figure 4. Cable Connection	6
Figure 5. SCE2120 installation - wall mount, ceiling mount and pole mount	8
Figure 6. The Mount Kit Package	9
Figure 7. Mount Kit	10
Figure 8. Before Installing the Mount Kit	10
Figure 9. Assemble the Mount Base (Part A) to SCE2120	11
Figure 10. Detach Mount Kit	11
Figure 11. Wall Mount Overview 1	12
Figure 12. Wall Mount Overview 2	12
Figure 13. Preparation Step 1 - Loosen the Screws	13
Figure 14. Preparation Step 2 – T-Bar Width	14
Figure 15. Ceiling Mount Overview 1	14
Figure 16. Ceiling Mount Overview 2	15
Figure 17. Pole Mount Overview 1	16
Figure 18. Pole Mount Overview 1	16
Figure 19. The Network Interfaces of the Askey 5G NR Small Cell	17
Figure 20. Access the Askey 5G NR Small Cell Admin Website via HTTPS	17
Figure 21. SCE2120 Label	19
Figure 22. The Askey 5G NR Small Cell Admin Website Sign-In Form	19
Figure 23. The Askey 5G NR Small Cell Admin Website Overview	20
Figure 24. The Askey 5G NR Small Cell Quick Reference Icons	21
Figure 25. The Askey 5G NR Small Cell Service Status	21
Figure 26. The Askey 5G NR Small Cell GPS Status	21
Figure 27. Map Illustration	22
Figure 28. The Askey 5G NR Small Cell Home Page	23
Figure 29. The Askey 5G NR Small Cell Connected Devices Page	24
Figure 30. The Askey 5G NR Small Cell Network Page	25
Figure 31. The Askey 5G NR Small Cell Network Page for the 2nd Interface	25
Figure 32. The Multiple Static IP Addresses Dialog Window	26
Figure 33. Add a new Item in Static IP Addresses Dialog Window	27
Figure 34. The Askey 5G NR Small Cell Network Page with the multiple IP addresses	28
Figure 35. The Askey 5G NR Small Cell Admin Website with the alternate static IP address	29
Figure 36. The Askey 5G NR Small Cell Advanced Page	32
Figure 37. The Askey 5G NR Small Cell Sync Source Page	33
Figure 38. The Askey 5G NR Small Cell Time Zone Page	34
Figure 39. The Askey 5G NR Small Cell Reset Page	36
Figure 40. The Askey 5G NR Small Cell Dashboard Page	37
Figure 41. The Askey 5G NR Small Cell gNB Page	39
Figure 42. The Local Provision Method in gNB Configuration	40
Figure 43. The Askey OAM Architecture	41
Figure 44. VLAN IP Address	41
Figure 45. The Askey 5G NR Small Cell Switch CU or DU Configuration	43
Figure 46. The Askey 5G NR Small Cell DU Configuration – Common Items	43

Figure 47. The Askey 5G NR Small Cell DU Configuration – Bandwidth Profile.....	44
Figure 48. The Askey 5G NR Small Cell DU Configuration – SAS Provider.....	44
Figure 49. The Askey 5G NR Small Cell DU Configuration – NR ARFCN.....	47
Figure 50. The Askey 5G NR Small Cell DU Configuration – Time Slot Profile.....	48
Figure 51. The Askey 5G NR Small Cell DU Configuration – Time Slot Parameters.....	48
Figure 52. The Askey 5G NR Small Cell Neighbor Cell Page.....	51
Figure 53. The Askey 5G NR Small Cell RF Antenna Page.....	53
Figure 54. The Askey 5G NR Small Cell VLAN Page.....	55
Figure 55. The Askey 5G NR Small Cell VLAN Page – Read Operation.....	56
Figure 56. The Askey 5G NR Small Cell VLAN Page – Create Operation.....	56
Figure 57. The Askey 5G NR Small Cell VLAN Page – Update Operation.....	57
Figure 58. The Askey 5G NR Small Cell VLAN Page – Delete Operation.....	58
Figure 59. The Askey 5G NR Small Cell Static Routing Page.....	59
Figure 60. The Askey 5G NR Small Cell Version Page.....	60
Figure 61. The Askey 5G NR Small Cell GPS Page.....	63

List of Tables

Table 1. SCE2120 General Specification.....	1
Table 2. List of Items in the Box	2
Table 3. SCE2120 IO Interface.....	3
Table 4. LED Status Overview.....	7
Table 5. The Askey 5G NR Small Cell Home Page.....	23
Table 6. The Askey 5G NR Small Cell Connected Devices	24
Table 7. The Askey 5G NR Small Cell Network.....	31
Table 8. The Askey 5G NR Small Cell Advanced.....	32
Table 9. The Askey 5G NR Small Cell Sync Source.....	34
Table 10. The Askey 5G NR Small Cell Dashboard	38
Table 11. The Askey 5G NR Small Cell CU Configuration.....	42
Table 12. The Askey 5G NR Small Cell DU Configuration – Common.....	43
Table 13. The Askey 5G NR Small Cell DU Configuration – Bandwidth and NR ARFCN.....	48
Table 14. The Askey 5G NR Small Cell DU Configuration – Time Slot Format.....	50
Table 15. The Askey 5G NR Small Cell Neighbor Cell Configuration.....	53
Table 16. The Askey 5G NR Small Cell GPS.....	65

Chapter 1 Introduction

1.1 Brief Introduction

This user Guide introduces the Askey 5G NR indoor small cell SCE2120 for Enterprise, which supports N48 (3.55~3.7GHz)/N77(3.55~4.2GHz)/N78(3.55~3.8GHz) band. Meeting the demand for indoor connectivity, it is an ideal and powerful solution to deliver a superior network access experience. This super and compact small cell has integrated baseband and radio into a single product, which can support external antenna and help break installation barriers. The SCE2120 Small Cell is part of the carrier-grade, end-to-end Askey Small Cells solution that is definitely suitable for various scenarios, such as smart buildings, factories, hospitals, shopping malls, elevators, underground parking etc.

Figure 1. Askey 5G NR Indoor Small Cell SCE2120



1.2 Specification

Table 1. SCE2120 General Specification

Item	Description
Model Name	NR xCell 46116A
Band	N48(3.55~3.7GHz) N77(3.55~4.2GHz) N78(3.55~3.8GHz)
Bandwidth	N48 : 20/30/40 MHz N78 : 20/30/40/50/60/70/80/90/100MHz N77 : 40/50/60/70/80/90/100MHz
Max. TX Power	N48: EIRP < 30dBm N77/N78: 24dBm

Antenna	Internal/External 2x2 MIMO
LED	1 LED
Backhaul	10G SFP+/2.5G WAN
Power Supply	DC 12V/POE++(support 802.3bt)
Power Consumption	40W
Active Users	16~32
Data Rates	700Mbps/100 Mbps
Installation	Wall /Ceiling/Pole mount
IP Grade	IP50
Dimensions	W250 x H250 x D65mm
Weight	<2.5kG
Operating Temperature	-5°C – 50°C
Operating Humidity	90% maximum, non-condensing

1.3 What's in The Box





The Askey SCE2120 box contains:

- SCE2120
- Power Adapter
- GPS antenna

The following optional items are available:

- Ethernet cable (Optional)
- Mounting Accessories (Optional)
- SFP+ module(Optional)

Table 2. List of Items in the Box

Items	Qty	Description	Picture
1. Askey Small Cell SCE2120	1	The Askey 5G NR indoor small cell SCE2120. Please check the label to make sure you have received the correct base station	
2. Power Adapter	1	Length: 2.6m	
3. GPS antenna	1	Length: 7m	
4. Ethernet cable (Optional)	1		

5. Mounting Accessories (Optional)	1	Optional, please refer to 2.4 for more details	
6. SFP+ module (Optional)	1	10G SFP+, please note that the highest operating temperature specification of 10G SFP+ module must be workable at minimum 75°C.	

1.4 IO Interfaces

This section will guide you through the interfaces and functions of SCE2120.

About the RF Antenna, there are two different scenarios,

- Internal antenna. Using the embedded antennas in the housing (Default mode).
- External antenna. If you would like to use the external antennas, you need to connect the external antennas into the ANT1 & ANT2 port, which are SMA connector. There is the description about the operation function of antenna switching in Section 3.5.3 **RF Antenna**. Users can directly operate in the web UI to switch to the external antenna they want to use.

About Synchronization, there are two different scenarios,

- With GPS. The GPS antenna is required for the automated setup process and search for the GPS signal for synchronization.
- Without GPS. In this scenario, you must have the grand master and BC Switch for synchronization rather than GPS, so in this scenario the GPS is not necessary.

SCE2120 has a single multicolored LED used to indicate the device connectivity status. Please review Section 2.3 LED status for the LED guide when attempting to troubleshoot the solution.

Figure 2. IO Interfaces



Table 3. SCE2120 IO Interface

Item	Description
SFP+	The SFP+ port allows you to connect a fiber to establish communication between SCE2120 and switch/router.
RESET	The Reset allows you to reset the device to factory defaults.


GPS	The GPS antenna port provides access to a SMA Female interface for the external GPS antenna cable. When GM/BC switch is used, no GPS is needed to connect.
1PPS	Output the PPS synchronization signal.
DBG	The DBG port is used for debug.
WAN	The WAN port allows you to connect an Ethernet cable to establish communication between SCE2120 and switch/router.
DC IN	The 12V DC Power port is used to power SCE2120 when connected to the AC power adaptor. Use only the provided power adapter, as using any other power adapter may damage SCE2120
ANT1	ANT1 for External 3.3-5GHz 5G antenna connection
ANT2	ANT2 for External 3.3-5GHz 5G antenna connection

Chapter 2 Setup

2.1 Setup Procedure

This part outlines the procedures needed to set up SCE2120.

Figure 3. Setup Procedure

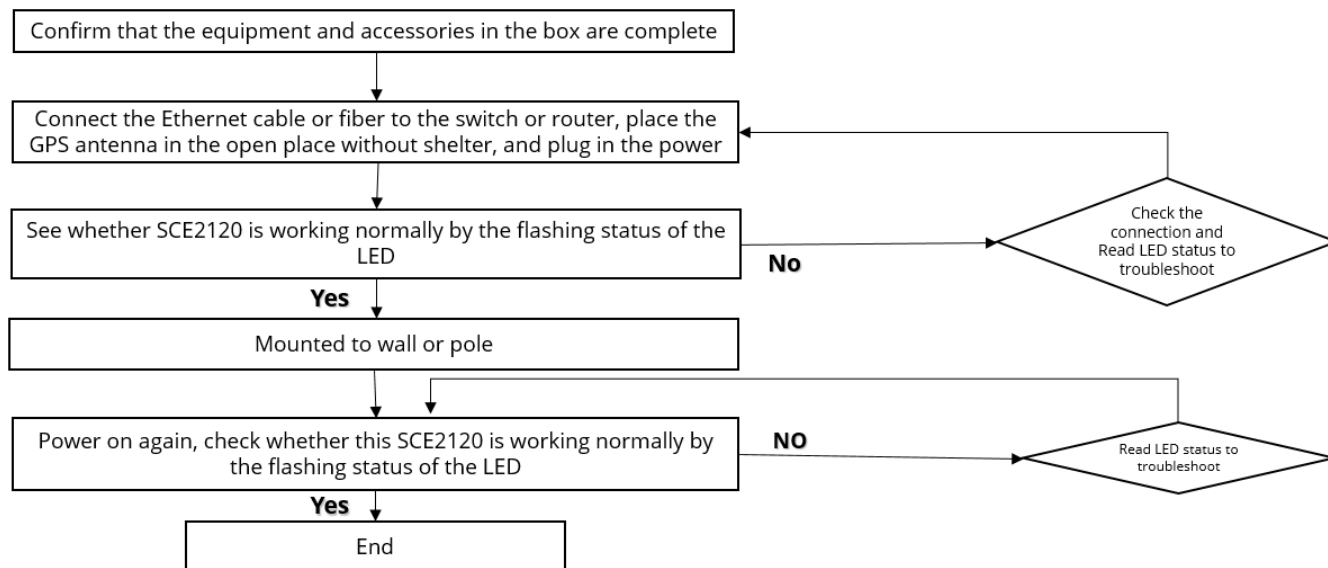

2.2 Cable Connection

Connect the Ethernet cable, power cable and GPS antenna correctly.


- **Indoor GPS antenna**

1. Turn off SCE2120.
2. Connect the provided Indoor GPS antenna cable to GPS port on the SCE2120.
3. Place the antenna near a window where the GPS signal is stronger.
4. Turn on the SCE2120 to allow the detection of an available GPS signal.

Noted:

- If using PTP sync solution. there is no need to connect the GPS antenna to the SCE2120.
- If using fiber transmission. 10G SFP+ module and fiber are needed. **Please note that the highest operating temperature specification of 10G SFP+ module must be workable at minimum 75°C., otherwise the device will be down.**

Figure 4. Cable Connection

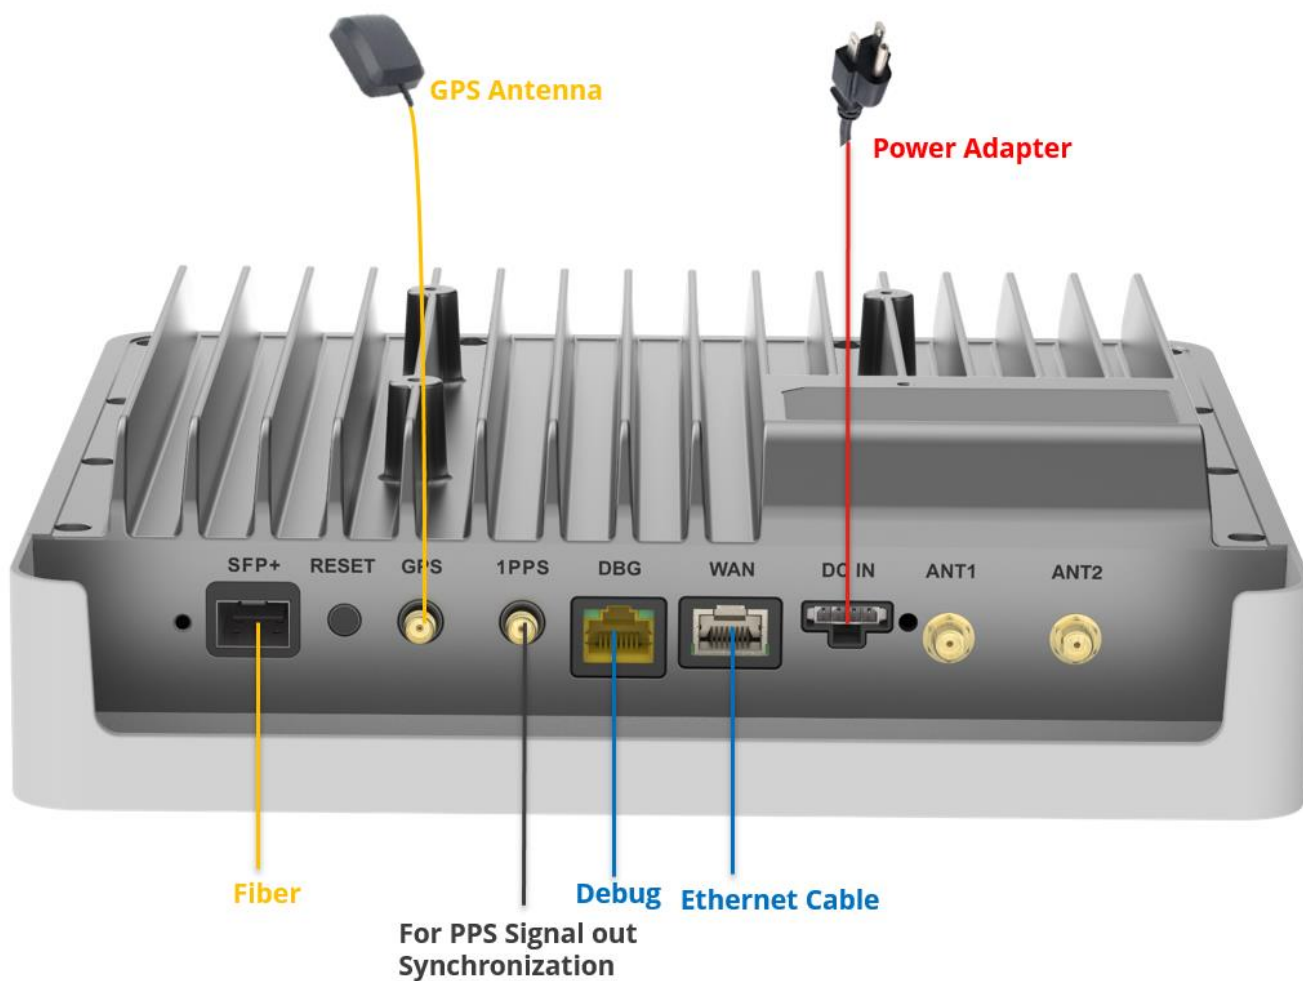

2.3 LED Status

After all the connections are connected and the SCE2120 is powered on, please check the status of LED on the device. The LED will flash according to the LED description provided in Table 4.

If the SCE2120 is operating as expected, continue to Section 2.4. If the SCE2120 is not functioning properly and you have to carefully check all steps.

Table 4. LED Status Overview

Item	Description	LED	User instruction
1	Power On	Solid Red	
2	Network is initializing	Blue Blink (Light on for 3 seconds, light off for 3 seconds)	<p>1. The small cell is acquiring IP address, please wait.</p> <p>2. If the LED stays at this stage for more than 5 mins, please check the Ethernet cable is firmly connected at both ends, and the switch, router, or internet gateway is turned on.</p>
3	GPS Sync Progressing	Green Blink (Light on for 1 seconds, light off for 3 seconds)	<p>1. The small cell is syncing and acquiring GPS signal, please wait.</p> <p>2. If the LED stays at this stage for more than 10 mins, the small cell has failed to acquire minimally required GPS signal, please try to move your GPS antenna closer to the window.</p> <p>3. If the issue persists, please call Customer Service.</p> <p>Note: First GPS sync lock may take 45 minutes</p>
4	OAM Configuring	Blue Blink (Light on for 1 seconds, light off for 3 seconds)	<p>1. The network management server is provisioning the small cell, please wait.</p> <p>2. If the LED stays at this stage for more than 10 minutes, the small cell has not received all required or correct provisioning parameters from HeMS. Please try reboot your device again.</p> <p>3. If the issue persists, please call Customer Service.</p>
5	5G Service is initializing	Blue Blink (Light on for 1 seconds, light off for 1 seconds)	<p>1. The small cell is syncing with 5G network, please wait.</p> <p>2. If the LED stays at this stage for more than 10 minutes, the small cell is still trying to connect to HeNB Gateway, please check the LAN/ firewall setting or contact your network administrator.</p> <p>3. If the issue persists, please call Customer Service.</p>
6	5G Service Ready	Solid Blue	5G service is ready in the small cell.
7	5G Service In Progress	Green Blink (Light on for 1 seconds, light off for 1 seconds)	UE is connecting to 5G small cell, service is in progress.

8	Overheating	Red Blink (Light on for 3 seconds, light off for 3 seconds)	The small cell is overheating, please place this device in a cool area where the temperature is between 23~122 degrees Fahrenheit.
9	Software Upgrade	Fast Blue Blink	We are upgrading the software in the small cell, please wait.
10	GPS no signal	Red Blink (Light on for 1 seconds, light off for 1 seconds)	1. The small cell has tried to acquire GPS signal for 10 minutes, but failed to acquire minimally required GPS signal. Please try to move your GPS antenna closer to the window. 2. If the issue persists, please call Customer Service.
11	Setting static ip	Fast Green Blink	We are setting static ip 192.168.8.101

2.4 Installation


There are mainly 3 ways for SCE2120 installation - wall mount, ceiling mount and pole mount. This section will guide you through all the installation ways for SCE2120.

Figure 5. SCE2120 installation - wall mount, ceiling mount and pole mount

1. Wall Mount



2. Ceiling Mount

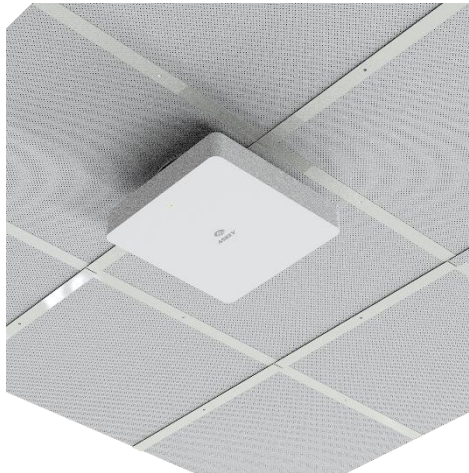

3. Pole Mount




2.4.1 Preparation

2.4.1.1 Mount Kit Package

The mount kit package includes the following parts,


Figure 6. The Mount Kit Package

No.	Item	QTY
1	Mount Kit	1
2	Screw M4(M4*11L)	4
3	Screw Anchor	2
4	Stainless steel clip	2

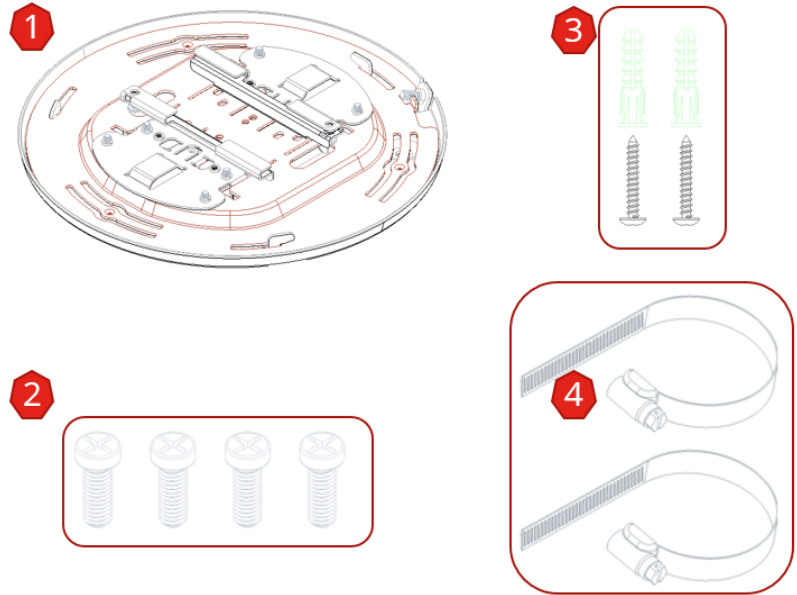

The mount kit includes different components as following,


Figure 7. Mount Kit

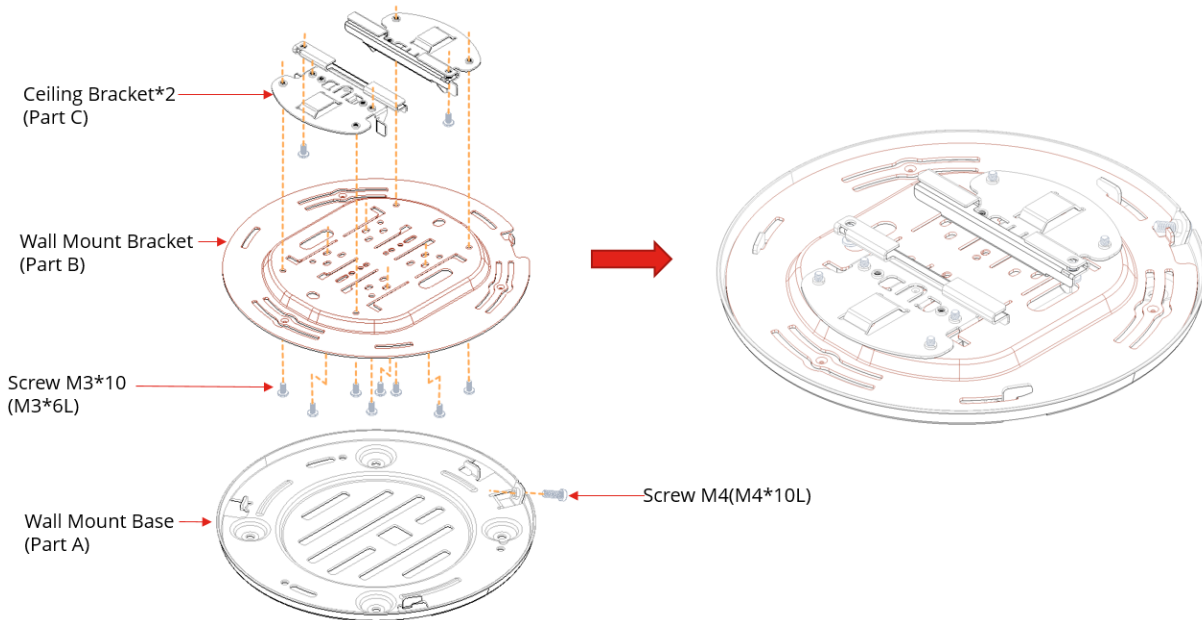

2.4.1.2 Before Install the Mount Kit


1. Loosen the M4 screws (M4*10L) with a Phillips screwdriver.
2. Remove "part B" by Rotating it counterclockwise and detach it into two parts.

Figure 8. Before Installing the Mount Kit

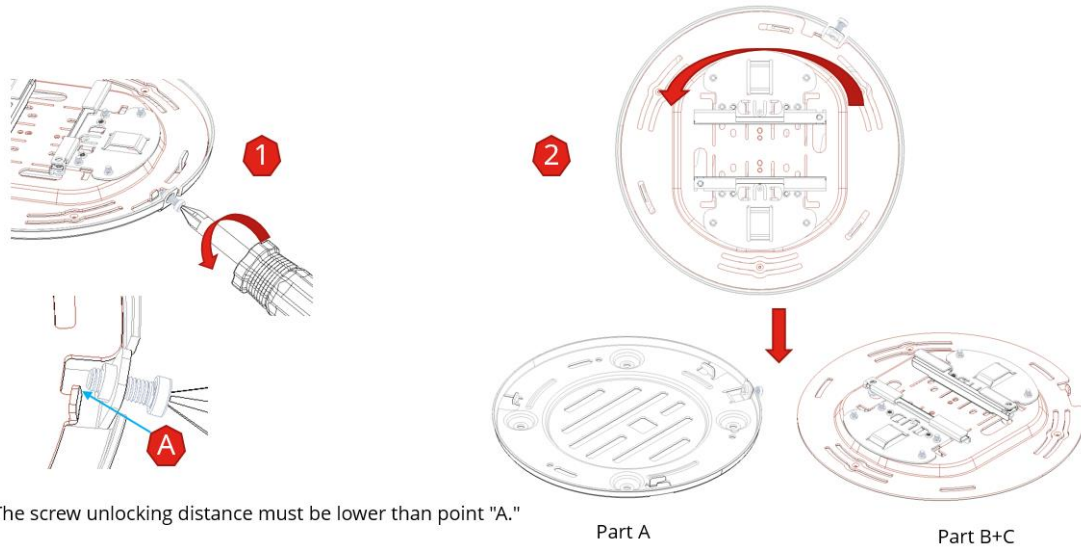

2.4.1.3 Assemble the mount base (Part A) to the Device

Assemble the mount base (Part A) to SCE2120 with M4 screw (M4*11L)*4, as shown in the figure 9.

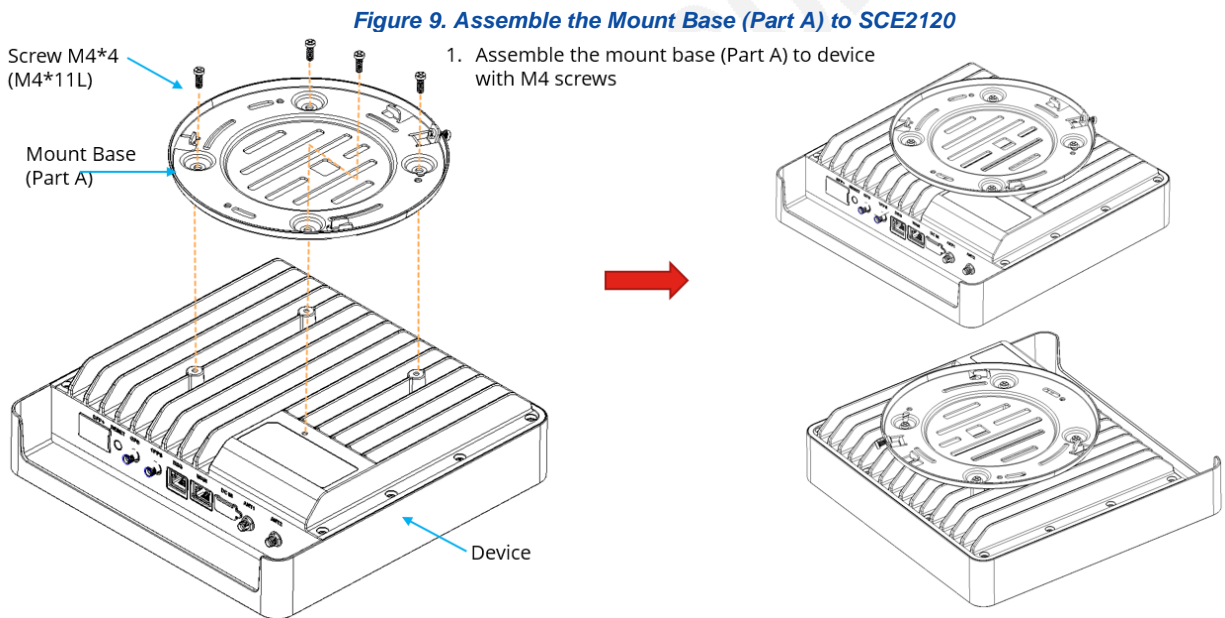


2.4.2 Wall Mount

2.4.2.1 Preparation

Detach the mount kit as the following,

Figure 10. Detach Mount Kit

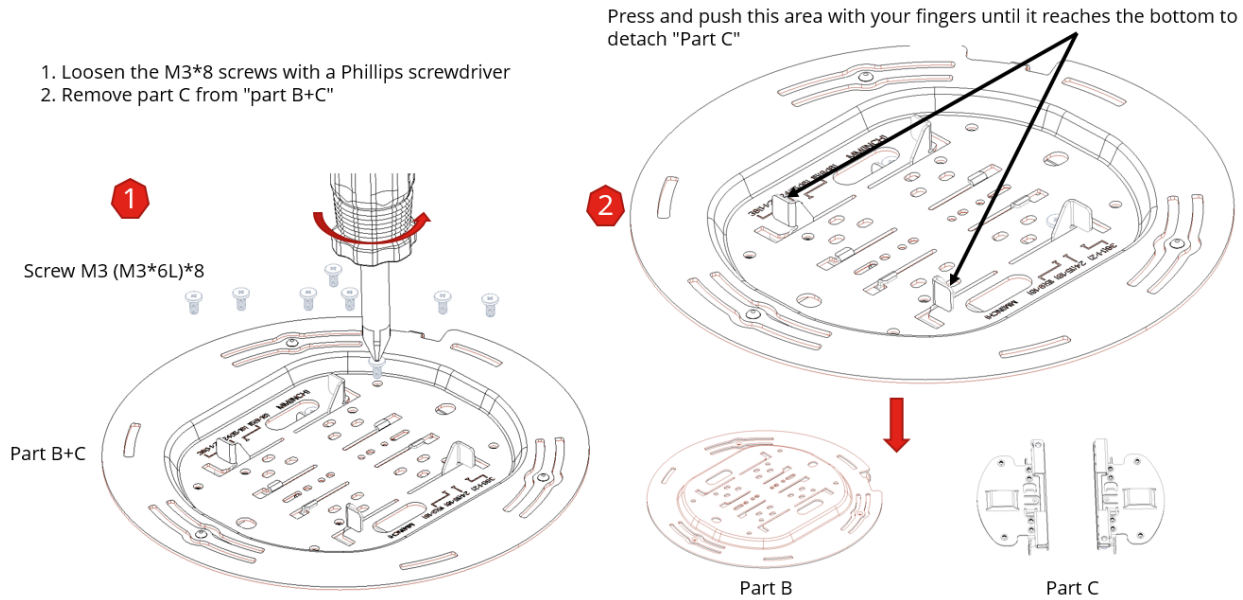

2.4.2.2 Installation

Installation Steps,

1. Drill two holes in the wall
2. Drive the screw anchor into the wall
3. Attach "Part B" using screws to secure it in place
4. Rotate the Device clockwise and hang it onto "Part B"
5. Tighten the M4 screws (M4*10L) to ensure that the Device cannot be detached

Figure 11. Wall Mount Overview 1

Installation

1. Drill two holes in the wall
2. Drive wall anchors into the wall
3. Attach "Part B" using screws to secure it in place


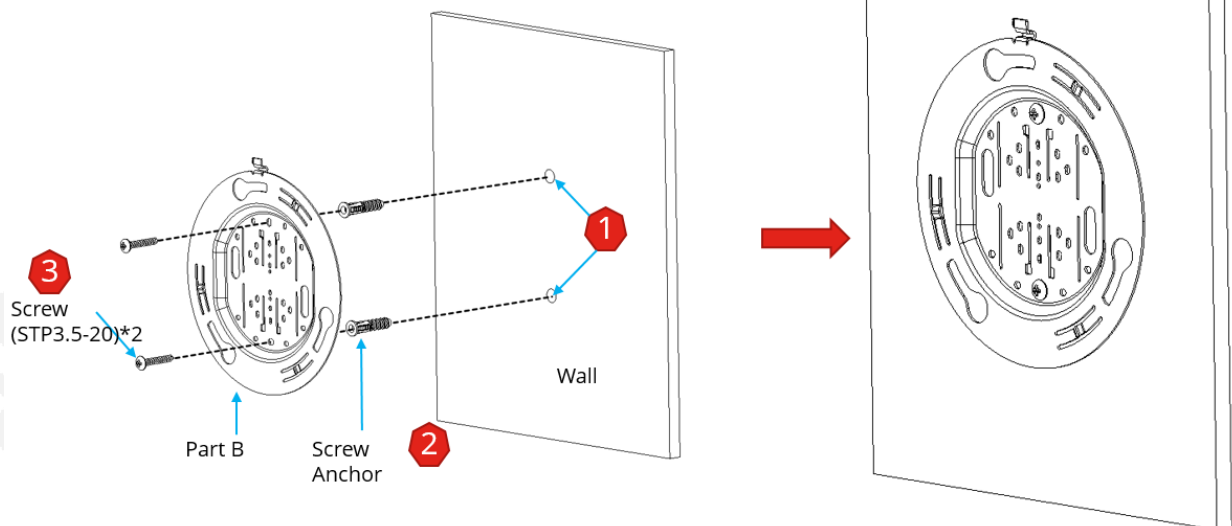


Figure 12. Wall Mount Overview 2

Installation

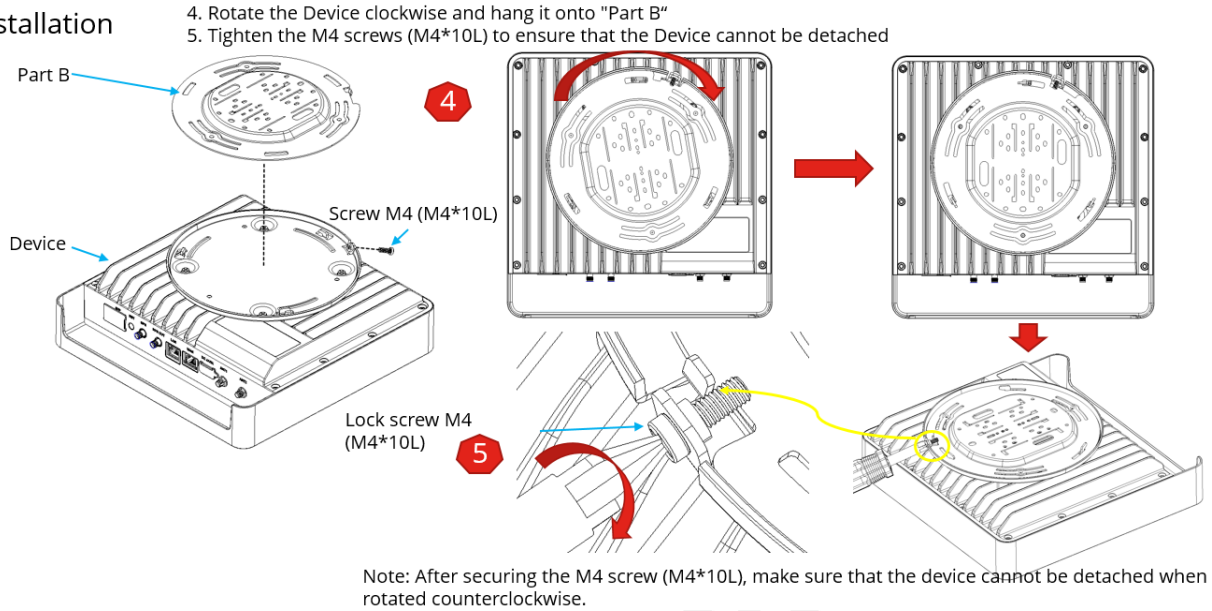


2.4.3 Ceiling Mount

2.4.3.1 Preparation


1. Loosen the M3 (M3*6L)*2 screws on "Part C" with a Phillips screwdriver, but do not remove the screws completely.
2. Remove the M3 (M3*6L)*8 screws with a Phillips screwdriver.

Figure 13. Preparation Step 1 - Loosen the Screws

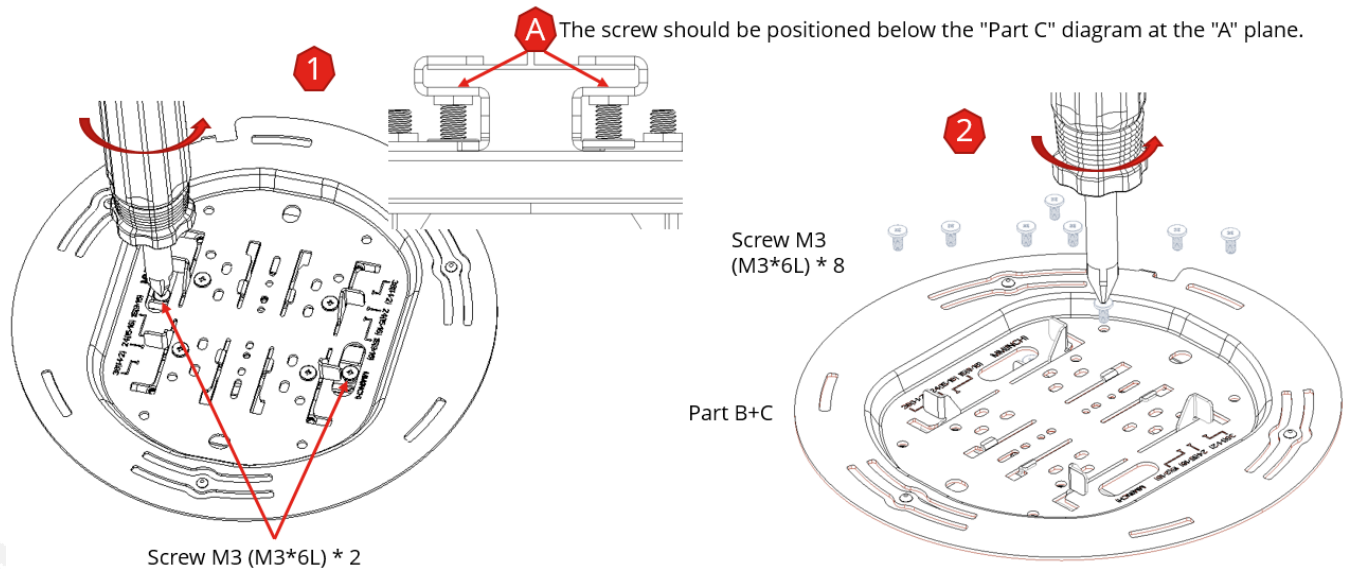

3. Verify the width of the T-Bar in the light steel frame.
4. Adjust the position of "Part C" to match the width of the T-Bar and secure it with a single M3 screw (M3*6L), without fully tightening it.
5. Push "component C," with the remaining screws not yet attached, to approximately the indicated position in the diagram.

Figure 14. Preparation Step 2 – T-Bar Width

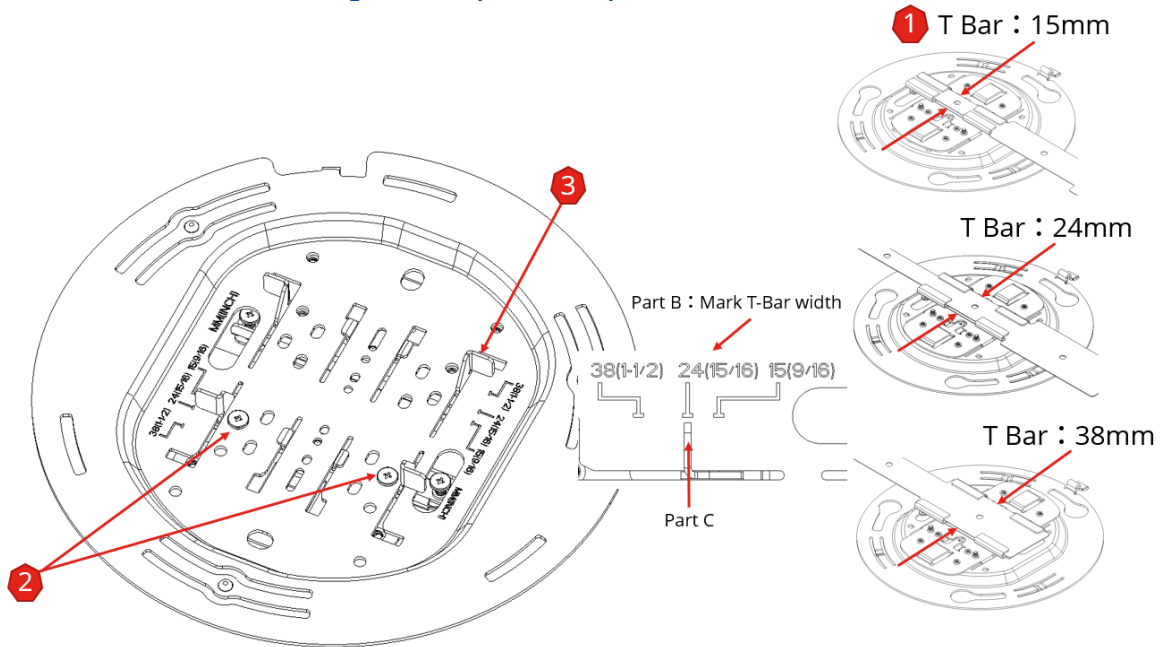

2.4.3.2 Installation

Installation Steps,

1. Fix the T Bar with the Part C (locked screw).
2. Press the unlocked screw "Part C" with your finger to engage the T-Bar.
3. Lock M3 screw (M3*6L) *2 to fix "part C" on the T Bar
4. Lock M3 screws (M3*6L) *4 to fix "Part C" to "Part B"
5. Rotate the Device clockwise and hang it onto "Part B"
6. Tighten the M4 screws (M4*10L) to ensure that the Device cannot be detached

Figure 15. Ceiling Mount Overview 1


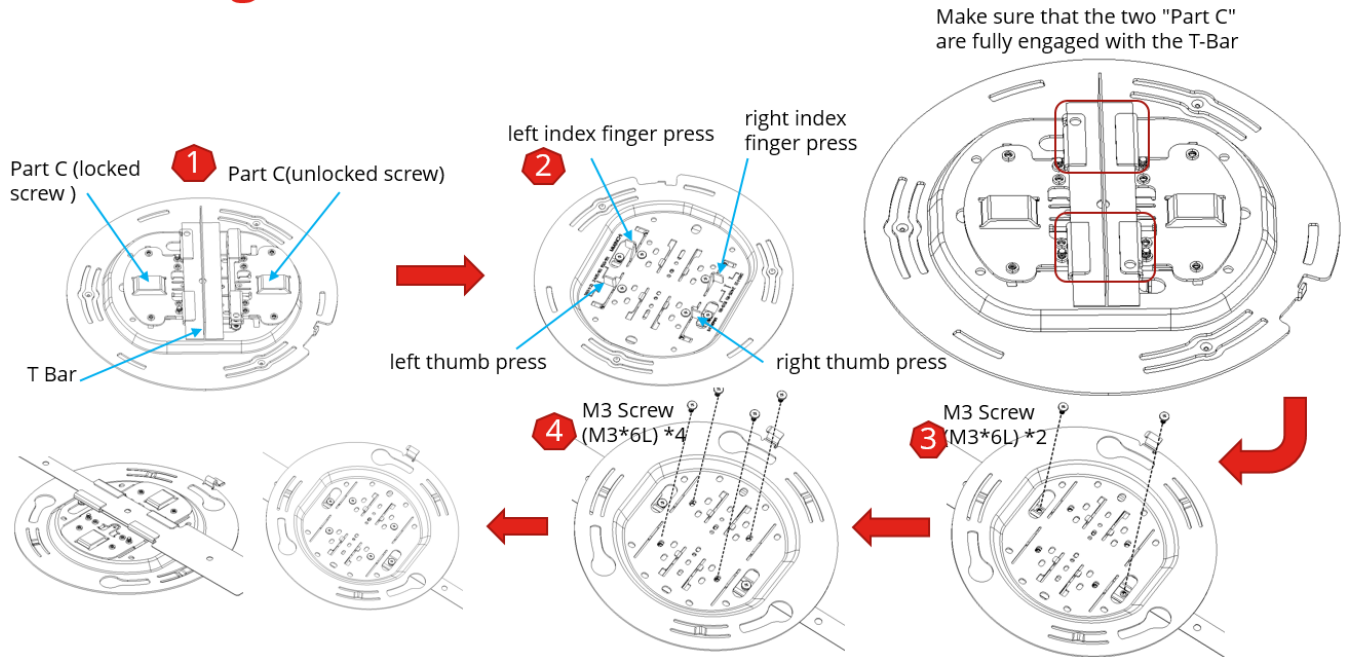


Figure 16. Ceiling Mount Overview 2

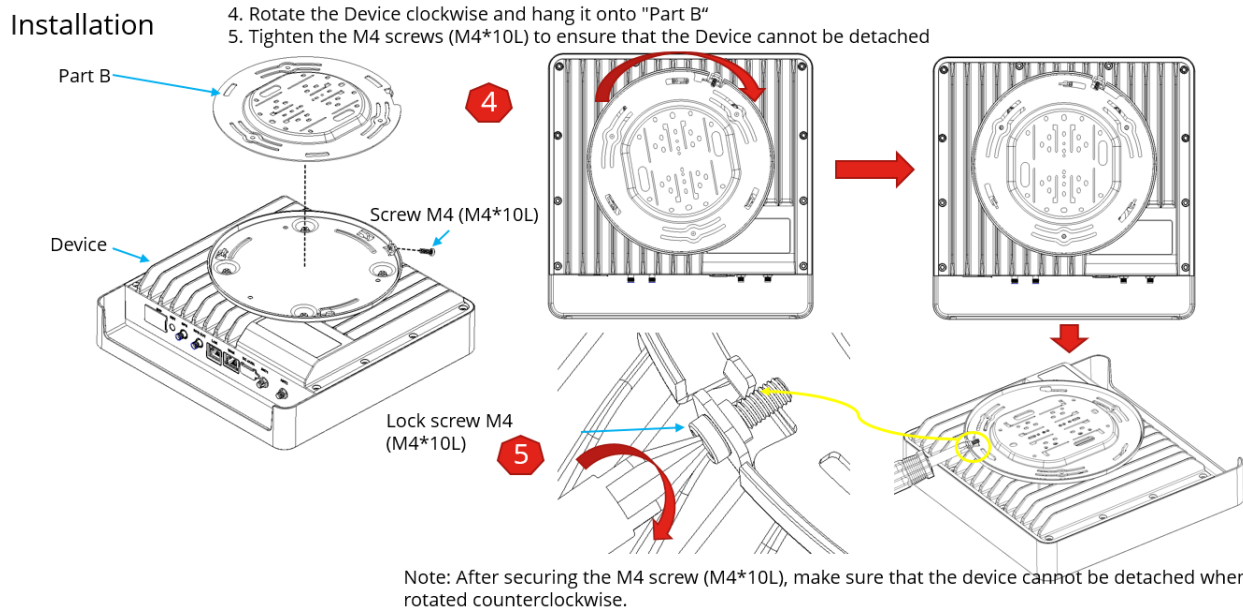

2.4.4 Pole Mount

Installation steps,

1. Pass two stainless steel clips through "Part C".
2. Bend the stainless steel clips around the cylinder and use a screwdriver to rotate them clockwise to lock and secure the stainless steel clips in place.
3. Rotate the Device clockwise and hang it onto "Part B"

4. Tighten the M4 screws (M4*10L) to ensure that the Device cannot be detached

Figure 17. Pole Mount Overview 1


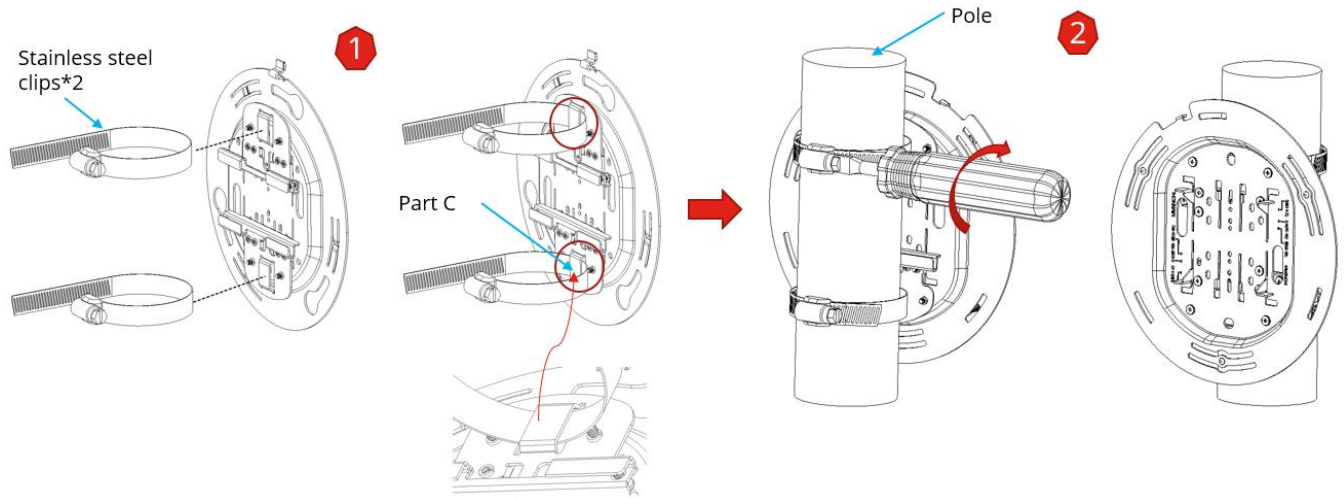


Figure 18. Pole Mount Overview 1

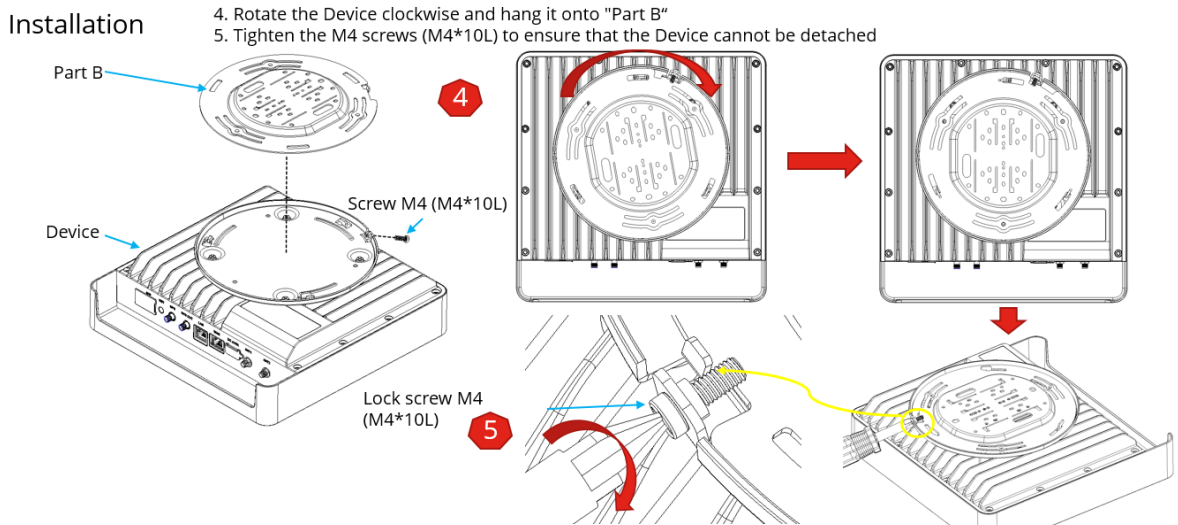

Note: After securing the M4 screw (M4*10L), make sure that the device cannot be detached when rotated counterclockwise.

2.5 Route the Cables

After finishing the installation, please connect various cables to the SCE2120 according to Section 2.2, and route the cables in a standard way to keep them looking good. Power on the SCE2120 again, and check the SCE2120 work properly by the status of LED.

Chapter 3 The Askey 5G NR Small Cell Admin Website

This section contains detailed information regarding the Askey 5G NR Small Cell Admin Website, where you can see the device status and make changes in the configurations.

To access the Askey 5G NR Small Cell Admin Website by following these steps:

1. Use a PC/NB connected to the same network as the Askey 5G NR Small Cell
2. Open a browser and enter the IPv4 address of the Askey 5G NR Small Cell as the following URL:
http://<ip address>, or
https://<ip address>

The two primary network ports, WAN and SFP+ in the following Figure, are used to connect the Small Cell backhaul. All the default IP addressing modes are DHCP, and you can change to the Static IP mode on the **Settings: Network** page.

Figure 19. The Network Interfaces of the Askey 5G NR Small Cell



The DBG port is a debug or rescue interface with the default Static IP **192.168.8.100**. You can connect directly to a PC/NB and surf the Admin Web by the URL **http://192.168.8.100** on PC/NB. The network setting of the DBG port could be modified if surfing the Admin Web by the method. But it only supports the Static IP mode starting with **192.168.8.** and doesn't support the gateway and name server.

The IP address of the DBG port will be reset to **192.168.8.100** if performing the factory reset on the Admin Web or holding the RESET button for more than 15 seconds.

The browser might display a warning message for the HTTPS access as the following illustration because the HTTPS server uses a self-signed certificate not signed by the Certificate Chain of Trust. Please click the "Advanced" button and continue surfing the website.

Figure 20. Access the Askey 5G NR Small Cell Admin Website via HTTPS



Your connection isn't private

Attackers might be trying to steal your information from 10.1.108.156 (for example, passwords, messages, or credit cards).

NET::ERR_CERT_AUTHORITY_INVALID

Advanced

Go back



Your connection isn't private

Attackers might be trying to steal your information from 10.1.108.156 (for example, passwords, messages, or credit cards).

NET::ERR_CERT_AUTHORITY_INVALID

Hide advanced

Go back

This server couldn't prove that it's 10.1.108.156; its security certificate is not trusted by your computer's operating system. This may be caused by a misconfiguration or an attacker intercepting your connection.

[Continue to 10.1.108.156 \(unsafe\)](#)

Click here

3.1 Admin Website Overview

3.1.1 Sign In

The homepage of the Admin Website will just be a login form. Please input the default administrator password.


The default password is “AskNodeB” + last 4 digits of the MAC (WAN) (e.g., AskNodeB F504).

Figure 21. SCE2120 Label




The password is case-sensitive. Letters in the last four digits of the MAC ID should be **UPPER** case.

Figure 22. The Askey 5G NR Small Cell Admin Website Sign-In Form

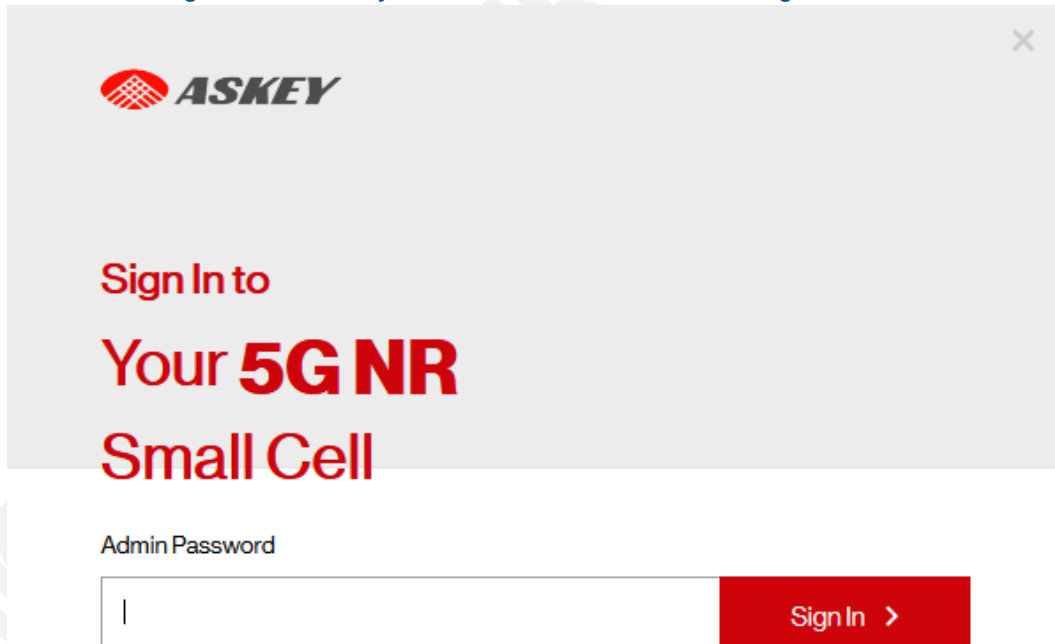

After the successful login, the Admin Website gives you the device information of the Askey 5G NR Small Cell.

Figure 23. The Askey 5G NR Small Cell Admin Website Overview

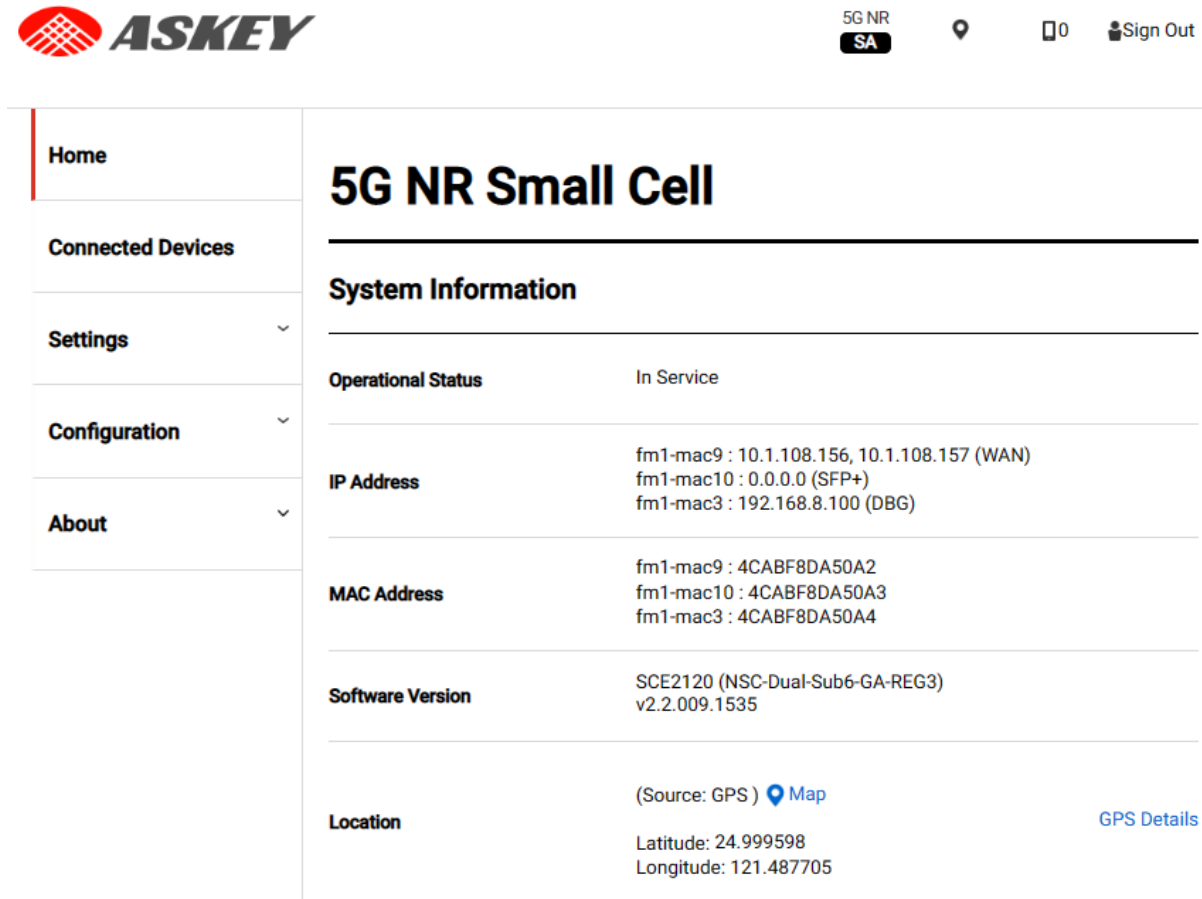

The screenshot shows the Askey 5G NR Small Cell Admin Website. The top navigation bar includes the Askey logo, a '5G NR SA' status indicator, a location pin icon, a '0' device count icon, and a 'Sign Out' button. The left sidebar contains a menu with 'Home', 'Connected Devices', 'Settings', 'Configuration', and 'About'. The main content area is titled '5G NR Small Cell' and displays 'System Information'.

System Information	
Operational Status	In Service
IP Address	fm1-mac9 : 10.1.108.156, 10.1.108.157 (WAN) fm1-mac10 : 0.0.0.0 (SFP+) fm1-mac3 : 192.168.8.100 (DBG)
MAC Address	fm1-mac9 : 4CABF8DA50A2 fm1-mac10 : 4CABF8DA50A3 fm1-mac3 : 4CABF8DA50A4
Software Version	SCE2120 (NSC-Dual-Sub6-GA-REG3) v2.2.009.1535
Location	(Source: GPS) Map Latitude: 24.999598 Longitude: 121.487705 GPS Details

The page shows basic device information such as the Operational Status, IP Address, MAC address, the software version, the GPS fixed location, and the Map illustration.

The quick reference icons on the upper right of the Welcome page indicate service status, GPS status, number of connected devices, and sign-in status as the following illustrators.

Figure 24. The Askey 5G NR Small Cell Quick Reference Icons

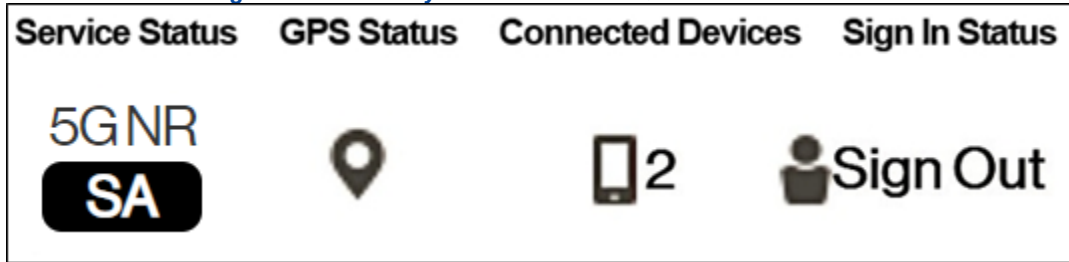


Figure 25. The Askey 5G NR Small Cell Service Status




Figure 26. The Askey 5G NR Small Cell GPS Status

 : GPS Lock Status

 : GPS Un-Lock Status

The GPS coordinates will be displayed at the bottom of the page if the GPS location is acquired. You can click the “**GPS Detail**” link to surf the GPS information page or click the “**Map**” to open the map illustration generated by ©**OpenStreetMap** as the following:

Figure 27. Map Illustration

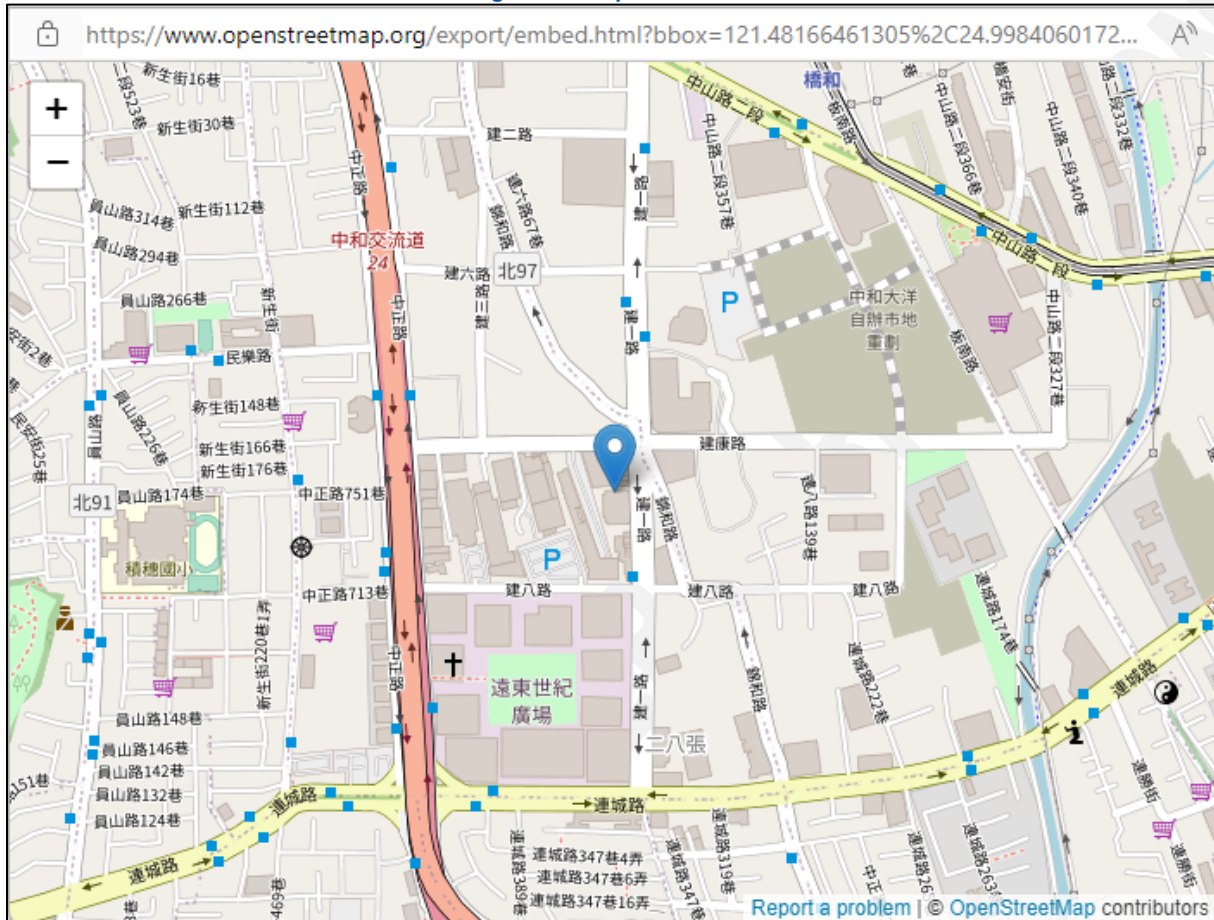

3.2 Home

The Homepage provides all the Askey 5G NR Small Cell information.

Figure 28. The Askey 5G NR Small Cell Home Page

Home	<h1>5G NR Small Cell</h1>	
Connected Devices	<h2>System Information</h2>	
Settings	Operational Status	In Service
Configuration	IP Address	fm1-mac9 : 10.1.108.156, 10.1.108.157 (WAN) fm1-mac10 : 0.0.0.0 (SFP+) fm1-mac3 : 192.168.8.100 (DBG)
About	MAC Address	fm1-mac9 : 4CABF8DA50A2 fm1-mac10 : 4CABF8DA50A3 fm1-mac3 : 4CABF8DA50A4
	Software Version	SCE2120 (NSC-Dual-Sub6-GA-REG3) v2.2.009.1535
	Location	(Source: GPS) Map GPS Details Latitude: 24.999598 Longitude: 121.487705


Table 5. The Askey 5G NR Small Cell Home Page

Items	Descriptions
Operational Status	The current operational status of the Askey 5G NR Small Cell.
IP Address	The Internet Protocol (IP) address of the Askey 5G NR Small Cell for the WAN, SFP+, and DBG ports, or Bridge interface (for NSA mode).
MAC Address	The MAC address associated with the device which can also be found on a sticker attached to the Askey 5G NR Small Cell.
Software Version	The current software version of the Askey 5G NR Small Cell includes the model name and access mode.
Location	It is the physical location of the Askey 5G NR Small Cell as reported by GPS.
Map	Clicking this link plots the location of the Askey 5G NR Small Cell on an Open Street Map. The Open Street Map link is available only if the GPS Status is "Location Acquired".

3.3 Connected Devices

The connected devices page shows the current connected users.

Figure 29. The Askey 5G NR Small Cell Connected Devices Page

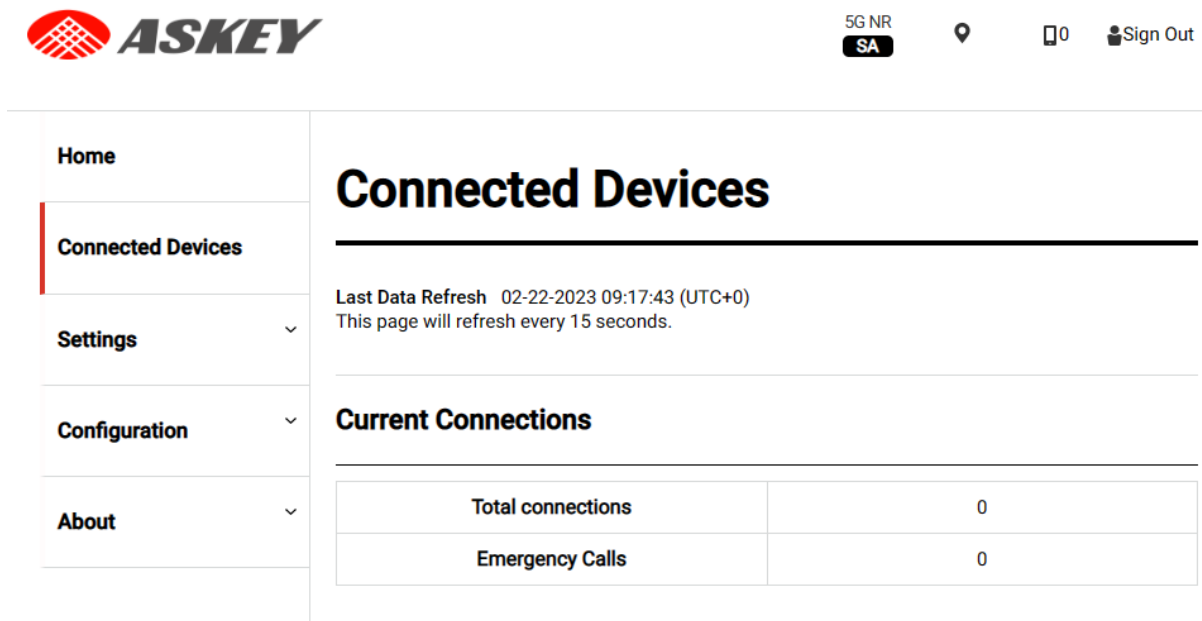

Connected Devices

Last Data Refresh 02-22-2023 09:17:43 (UTC+0)
This page will refresh every 15 seconds.

Current Connections

Total connections	0
Emergency Calls	0

Table 6. The Askey 5G NR Small Cell Connected Devices


Item	Description
Last Data Refresh	The local time when this page was last refreshed.
Total Connections	The number of wireless devices (phone, tablets, or other data devices) currently connected to the Askey 5G NR Small Cell with an active call or data session.
Emergency Calls	The number of wireless devices currently connected to the Askey 5G NR Small Cell with an active call to emergency services.

3.4 Settings

3.4.1 Network

From the Askey 5G NR Small Cell Network page, you can check and modify the detailed network settings. The settings will be effective immediately without rebooting.

Figure 30. The Askey 5G NR Small Cell Network Page

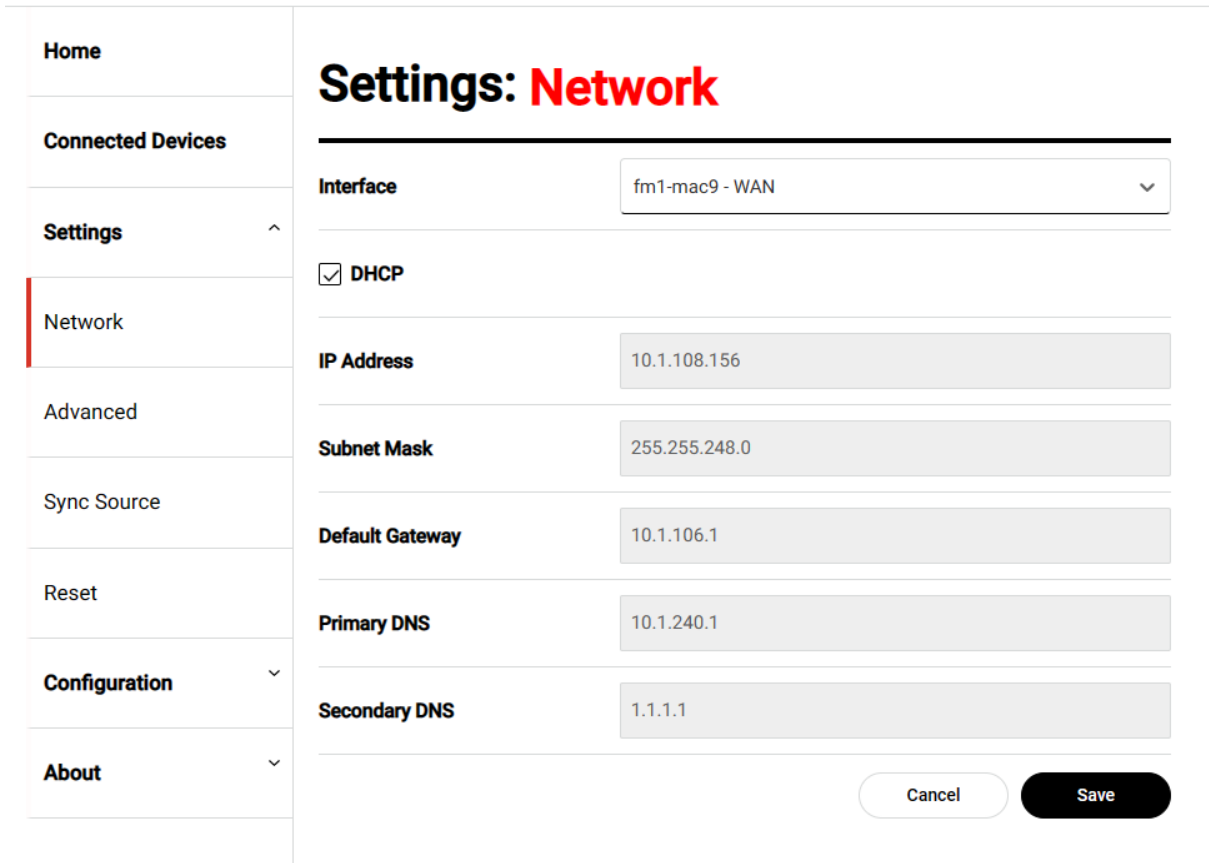

If the device has the multiple network interfaces, you can choose the interface by clicking the select bar as the following illustration:

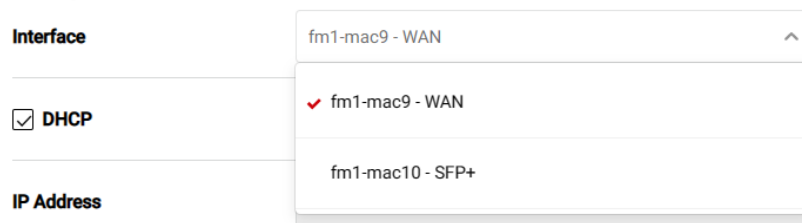


Figure 31. The Askey 5G NR Small Cell Network Page for the 2nd Interface

Home
Connected Devices
Settings
Network
Advanced
Sync Source
Reset
Configuration
About

Settings: Network

Interface
fm1-mac10 - SFP+

☒ DHCP

IP Address
0.0.0.0

Subnet Mask
0.0.0.0

Default Gateway

Primary DNS

Secondary DNS

Cancel Save

When the DHCP checkbox is disabled, you can manually set the network configurations for the specific interface. Click the IP Address or Subnet Mask item will pop up a dialog window to edit the multiple static IP addresses.

Interface
fm1-mac9 - WAN


☐ DHCP

IP Address
10.1.108.156

Subnet Mask
255.255.248.0

Default Gateway
10.1.106.1

Figure 32. The Multiple Static IP Addresses Dialog Window

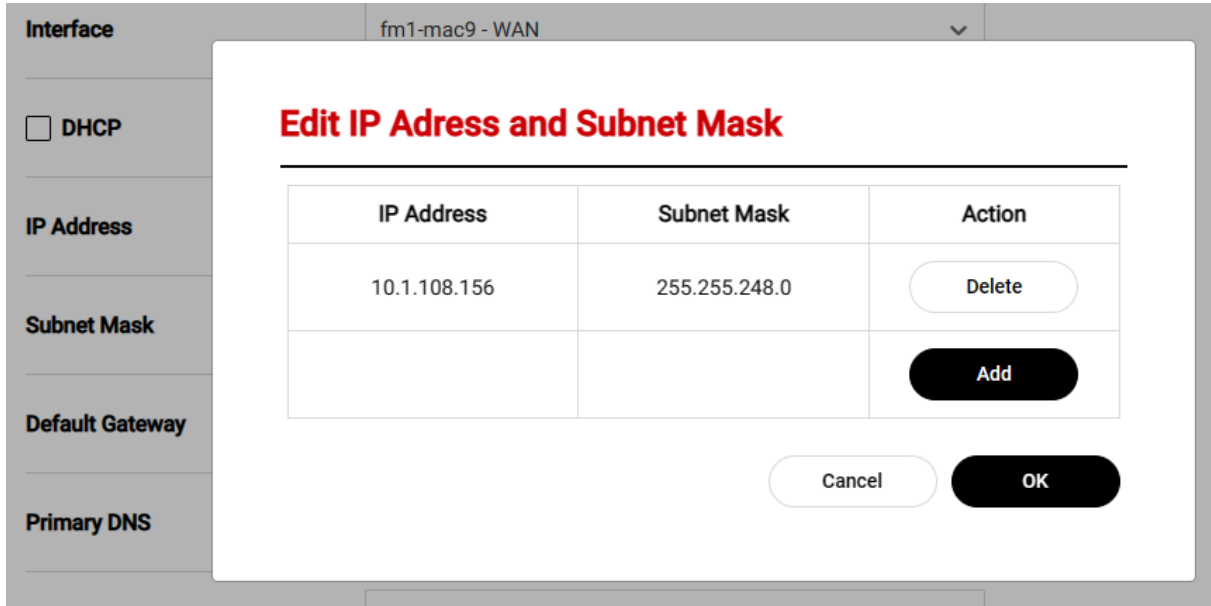

The IP address and subnet mask value can be modified directly on the dialog window, and remove the item by clicking the Delete button. If you want to add a new item, click the Add button and edit the configuration.

Figure 33. Add a new Item in Static IP Addresses Dialog Window

Edit IP Address and Subnet Mask

IP Address	Subnet Mask	Action
10.1.108.156	255.255.248.0	Delete
10.1.108.157	255.255.248.0	Delete
		Add

Cancel OK


All IP addresses and Subnet Mask will display by the comma-separated format on the Admin Website. Click the Save button to activate the multiple IP addresses without rebooting.

Figure 34. The Askey 5G NR Small Cell Network Page with the multiple IP addresses

Settings: Network


Interface	fm1-mac9 - WAN
<input type="checkbox"/> DHCP	
IP Address	10.1.108.156, 10.1.108.157
Subnet Mask	255.255.248.0, 255.255.248.0
Default Gateway	10.1.106.1
Primary DNS	10.1.240.1
Secondary DNS	1.1.1.1

Cancel
Save

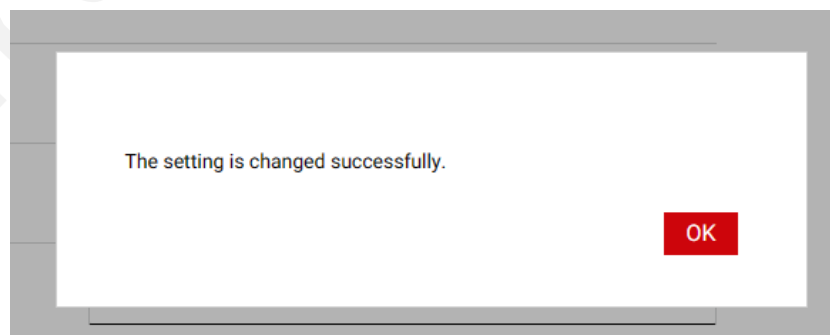


After the setting is changed successfully, you can use the browser to access the Admin Website by the new alternate static IP address.


Figure 35. The Askey 5G NR Small Cell Admin Website with the alternate static IP address

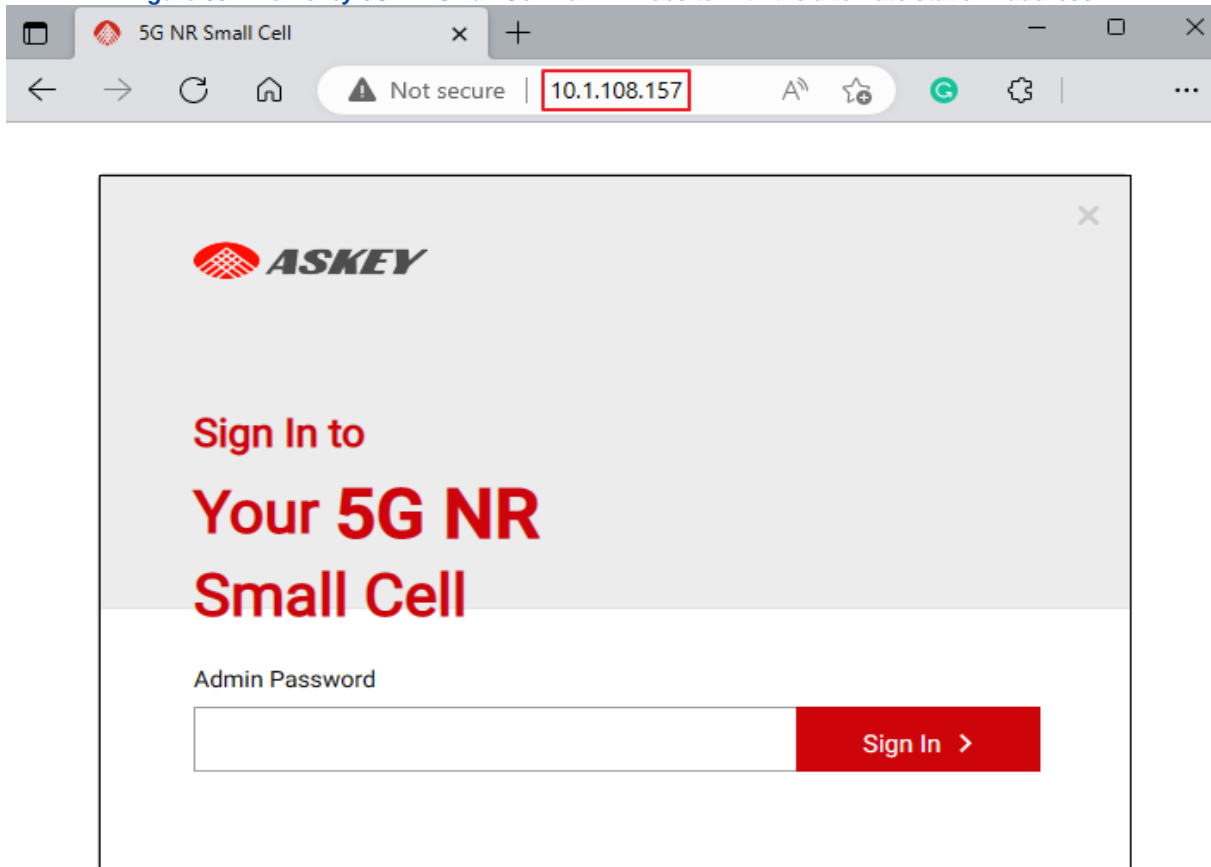

If you access the Admin Web by the IP address of the DBG interface displayed on the homepage, you can find the DBG item in the Interface select box as the following:

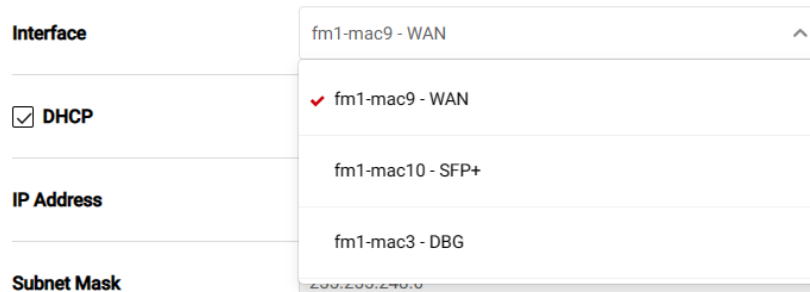

It means that you can click the item to modify the IP address of the DBG interface. As per the above statement, the IP address of the DBG interface only supports static IP starting with 192.168.8. and doesn't support to modify the gateway or name server. The GUI has some differences from other ports, as shown in the following illustration:

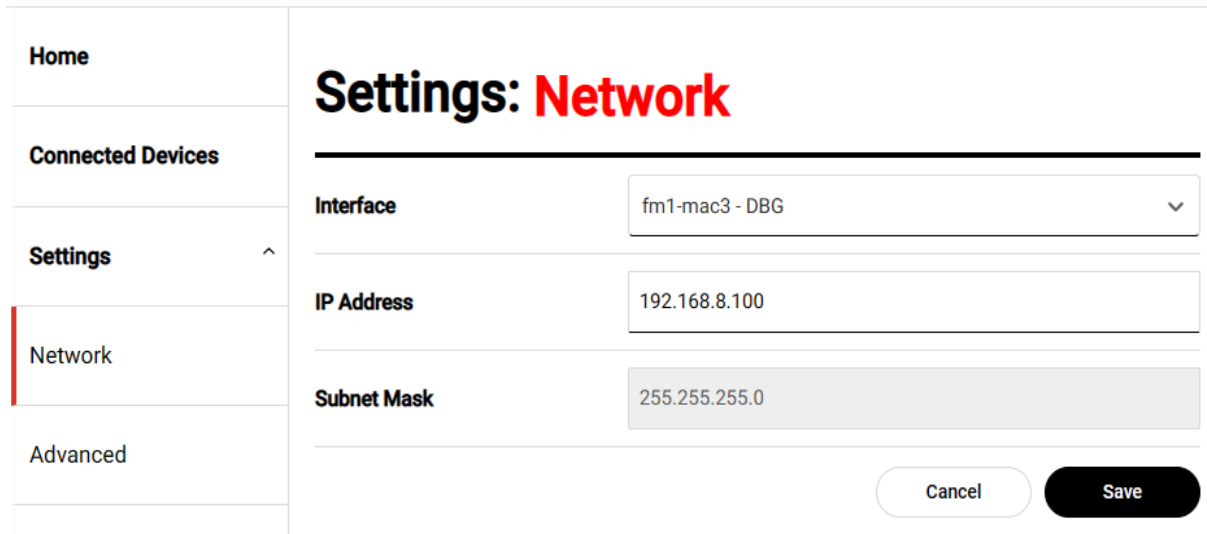

Settings: Network


Interface: fm1-mac3 - DBG

IP Address: 192.168.8.100

Subnet Mask: 255.255.255.0

Cancel Save

After you modify the new IP Address of the DBG port, you need to re-access the Admin Website with the new IP address.

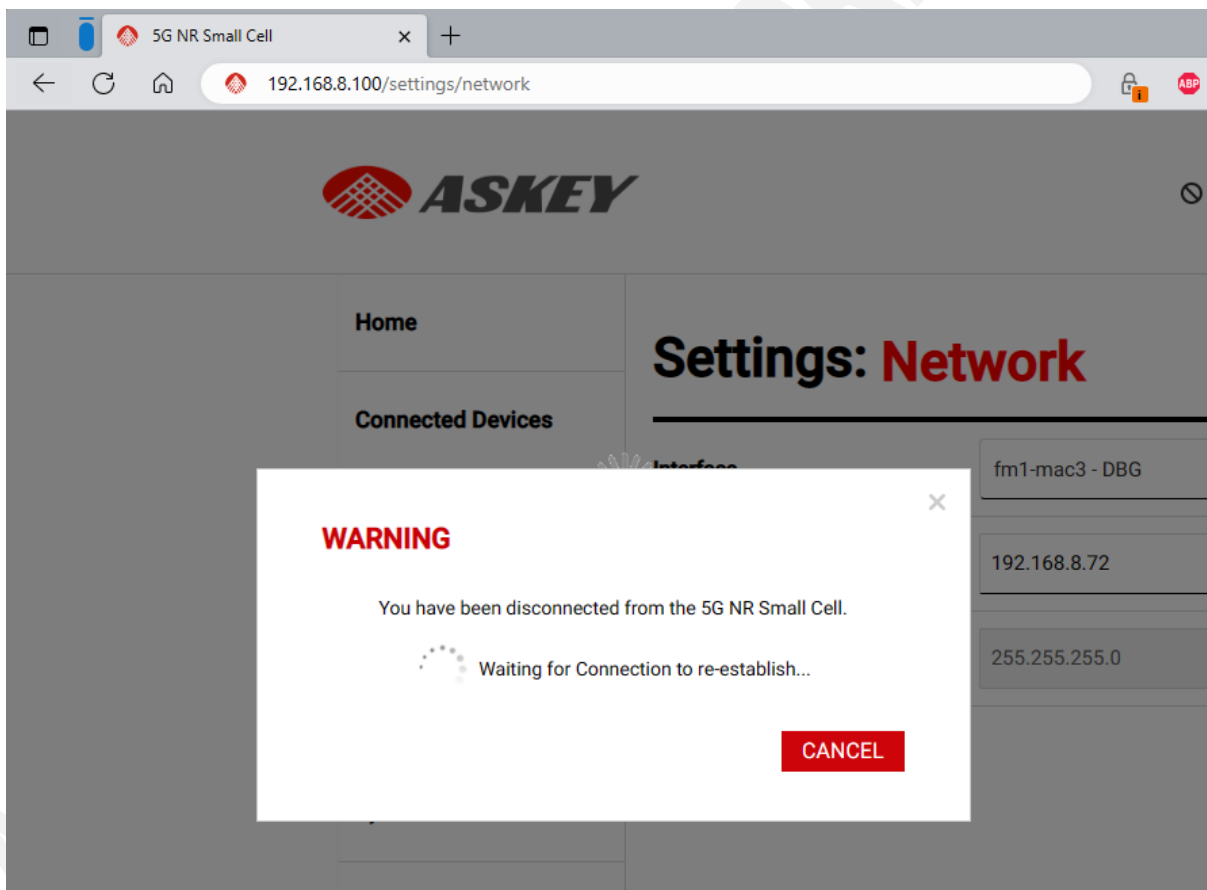

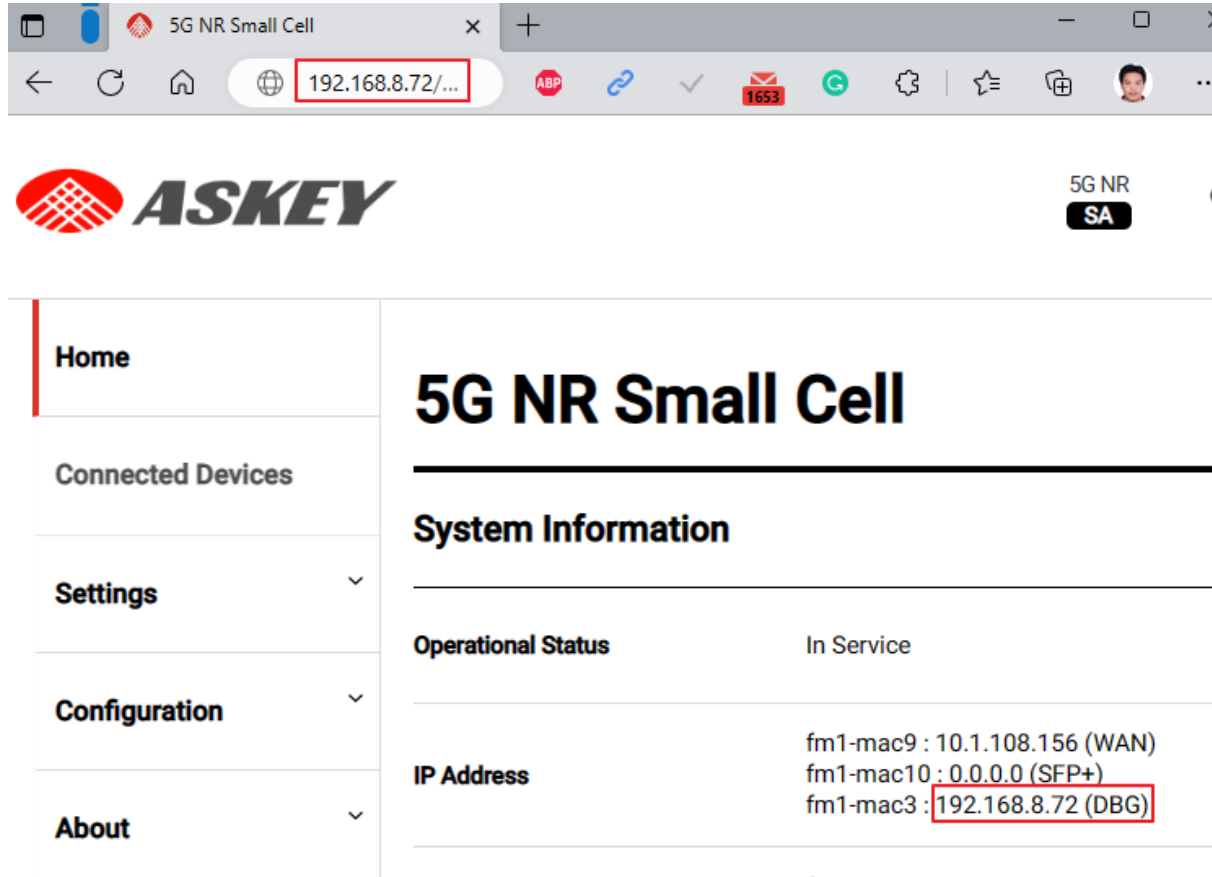



Table 7. The Askey 5G NR Small Cell Network

Item	Description
DHCP	This is a checkbox item. When it is checked (default), the DHCP is enabled, and the local DHCP server shall provide the IP configurations to the device. The user may uncheck this box to specify the multiple static IP configuration.
Default Gateway	If the DHCP is enabled, this field is read-only. It shows the DHCP-allocated default gateway IP address. If the DHCP is disabled, this field is read-write and indicates the user-defined Default Gateway IP address.
IP Address	If the DHCP is enabled, this field is read-only. It shows the DHCP-allocated IPv4 address. If the DHCP is disabled, this field is read-write and indicates the user-defined IPv4 address. It supports multiple combinations of the static IP address and Subnet Mask.
Subnet Mask	If the DHCP is enabled, this field is read-only. It shows the DHCP-allocated Subnet Mask. If the DHCP is disabled, this field is read-write and shows the user-defined Subnet Mask. It supports multiple combinations of the static IP address and Subnet Mask.
Primary DNS	If the DHCP is enabled, this field is read-only. It shows the DHCP allocated Primary DNS Server's IP address. If the DHCP is disabled, this field is read-write and shows the user-defined Primary DNS Server's IP address.
Secondary DNS	If the DHCP is enabled, this field is read-only. It shows the DHCP allocated Secondary DNS Server's IP address. If the DHCP is disabled, this field is read-write and indicates the user-defined Secondary DNS Server's IP address.

3.4.2 Advanced

The Askey 5G NR Small Cell Advanced page provides all cells' information and sync status.

Figure 36. The Askey 5G NR Small Cell Advanced Page

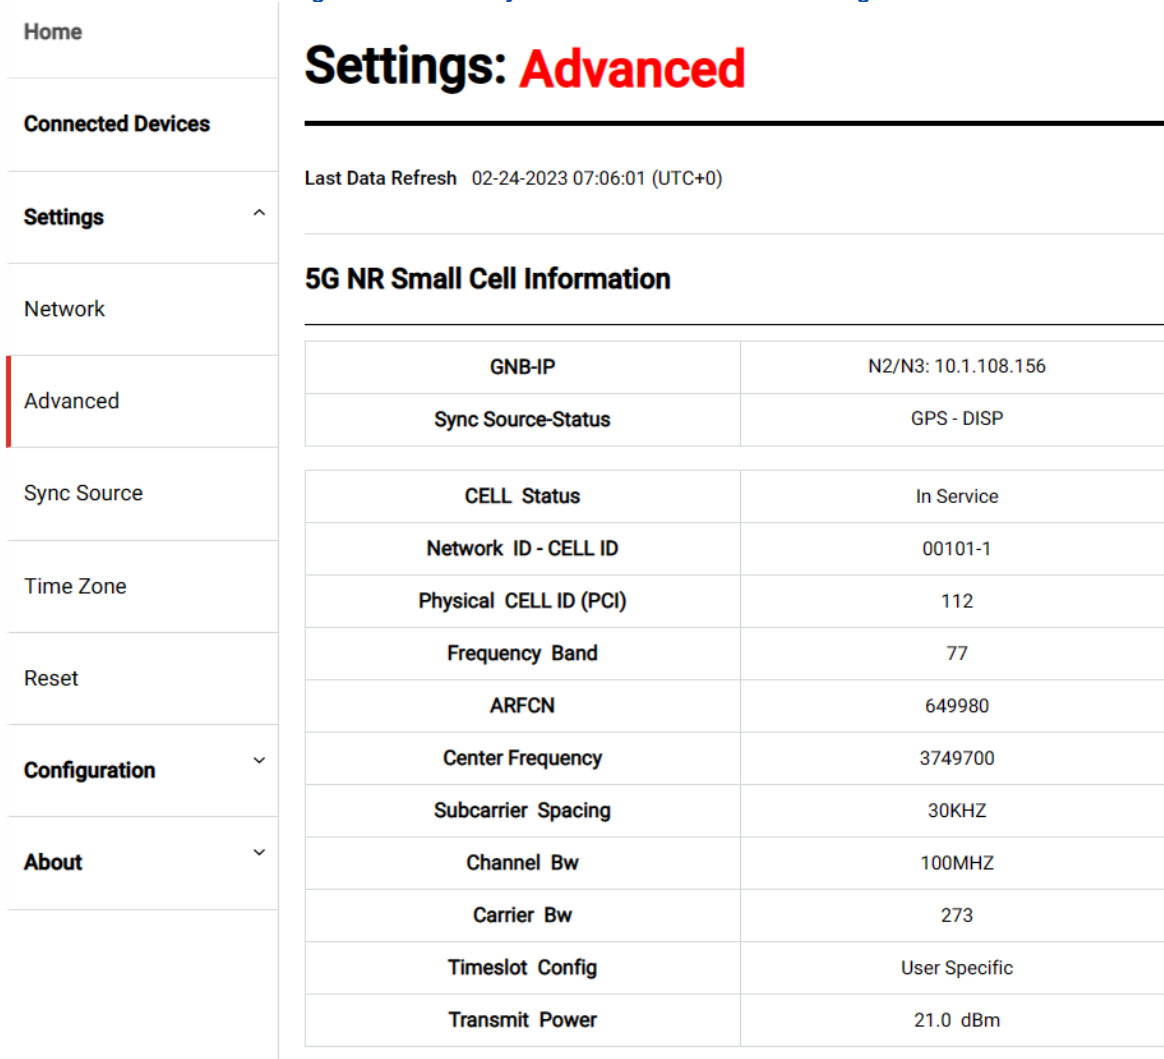

Home
Connected Devices
Settings
Network
Advanced
Sync Source
Time Zone
Reset
Configuration
About

Settings: Advanced

Last Data Refresh 02-24-2023 07:06:01 (UTC+0)

5G NR Small Cell Information

GNB-IP	N2/N3: 10.1.108.156
Sync Source-Status	GPS - DISP

CELL Status	In Service
Network ID - CELL ID	00101-1
Physical CELL ID (PCI)	112
Frequency Band	77
ARFCN	649980
Center Frequency	3749700
Subcarrier Spacing	30KHZ
Channel Bw	100MHZ
Carrier Bw	273
Timeslot Config	User Specific
Transmit Power	21.0 dBm

Table 8. The Askey 5G NR Small Cell Advanced

Item	Description
Last Data Refresh	The local time when this page was last refreshed.
5G NR Small Cell Information	This table shows the detailed information for The Askey 5G NR Small Cell. Where: •GNB-IP: The IP address of gNodeB •Sync Source-Status: The sync source and sync state
Serving Cell information	If the gNB processes are running, it will show the information of the serving cell(s). Additionally, the transmit power will show the correct value when the cell status is in-service.

3.4.3 Sync Source

The Askey 5G NR Small Cell Sync Source page provides the current sync state and the sync status for each sync source. It also allows the user to modify the sync type, priority, and detailed PTP configurations.

Figure 37. The Askey 5G NR Small Cell Sync Source Page

Home
Connected Devices
Settings
Network
Advanced
Sync Source
Time Zone
Reset
Configuration
About

Settings: Sync Source

Sync StateDISP

Sync TypeAuto

Source	GPS
Priority	255
Status	Active

Source	PTP
Priority	100
Status	Standby
PTP Interface	fm1-mac9 - WAN
Domain Number	44
PTP Mode	G.8275.2
PTP UDP IP	10.1.106.22

CancelSave

The sync type can be **Auto** or **Manual**. If the type is **Manual**, you should specify **GPS** or **PTP** as the sync source.

Sync TypeManual

Sync SourceGPS

Source	✓ GPS
Priority	PTP

The PTP Mode will be **G.8275.1** or **G.8275.2**. If the mode is **G.8275.2**, it should also specify the PTP UDP IP.

PTP Mode

G.8275.1

Cancel

Save

PTP Mode

G.8275.2

PTP UDP IP

10.1.106.22

Cancel

Save


Table 9. The Askey 5G NR Small Cell Sync Source

Item	Description
Sync State	It indicates the current sync state. It should be INIT , HARD_SYNC , DISP , RESYNC , or HOLDOVER . The cell processes will start until the sync state is DISP
Sync Type / Sync Source	It indicates the sync source choice mechanism. The Auto type will try the multiple sync sources based on the priority value. For the Manual type, it should specific the sync source be GPS or PTP . (For the small cell with network bridge mode, the sync source is only GPS)
Priority	If the sync type is Auto, the higher priority value will be tested earlier. The priority value should be the integer from 1 to 255 .
Status	It indicates the sync status for source GPS or PTP. The status will be Standby or Active .
PTP Interface	It indicates which network interface the gNB connects to the PTP server.
Domain Number	Specific the PTP clock domain by an integer in the range of 0 to 127 .
PTP Mode / PTP UDP IP	It indicates the current PTP mode, which supports G.8275.1 and G.8275.2 . If the mode is G.8275.2 , it should also specify the PTP UDP IP .

3.4.4 Time Zone

The Askey 5G NR Small Cell Time Zone page allows the user to adjust the Time Zone Offset for the data refresh time on the Admin Website

Figure 38. The Askey 5G NR Small Cell Time Zone Page

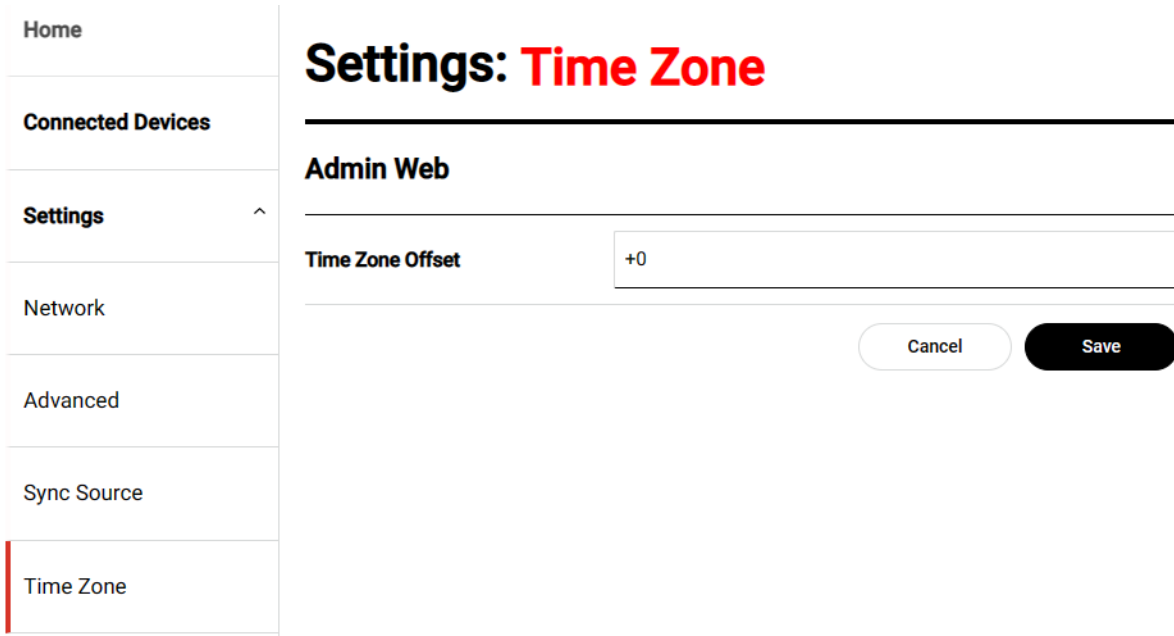

Home

Connected Devices

Settings ^

Network

Advanced

Sync Source

Time Zone

Settings: Time Zone

Admin Web

Time Zone Offset

Cancel Save

The default time zone offset is +0 (UTC). If the page will refresh automatically, the last data refresh will be displayed on the page as the following illustration:

Connected Devices

Last Data Refresh 02-24-2023 07:31:01 (UTC+0)
This page will refresh every 15 seconds.

The Time Zone Offset can adjust as an integer number that ranges from -12 to 14 and activates without rebooting.


Connected Devices

Last Data Refresh 02-24-2023 15:36:21 (UTC+8)
This page will refresh every 15 seconds.

3.4.5 Reset

The Askey 5G NR Small Cell Reset page allows users to remotely restart or factory reset the 5G NR Small Cell.

Figure 39. The Askey 5G NR Small Cell Reset Page

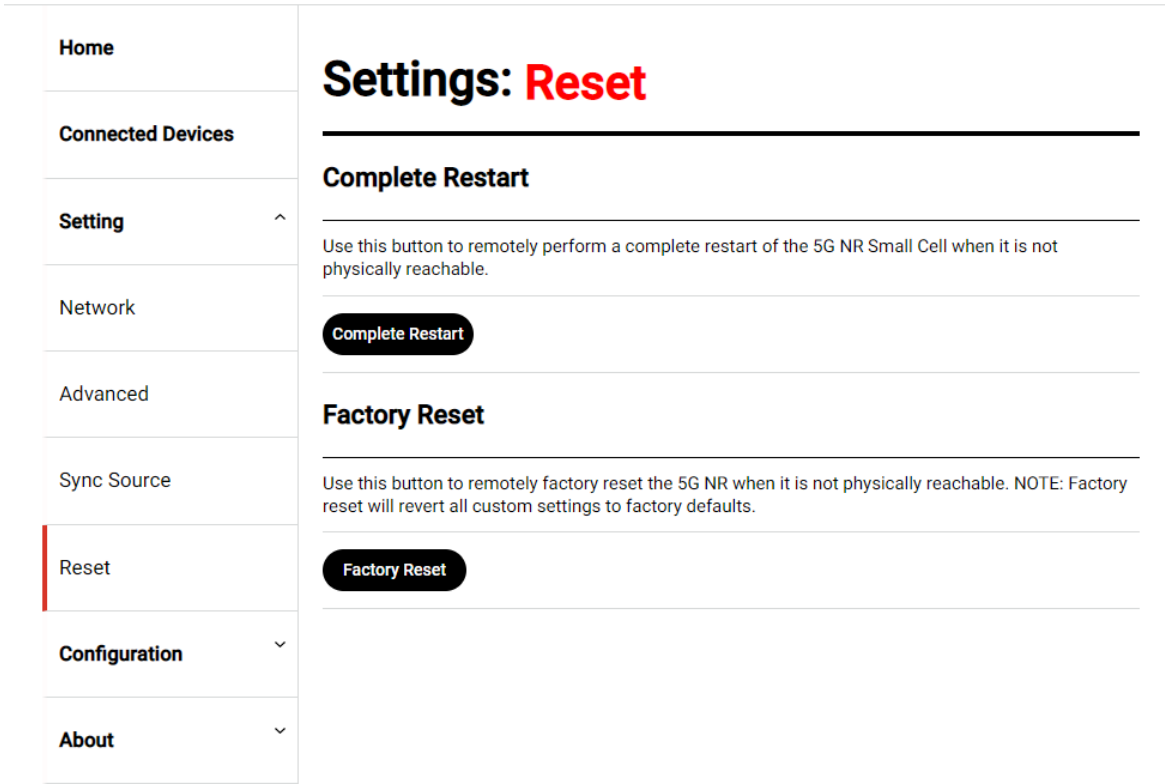

Factory reset will revert the custom settings to factory default settings. The admin website will pop up the following prompt message when clicking the Factory Reset button:

WARNING

Factory reset will revert the following custom settings to factory default settings. Do you wish to continue with factory reset?

- Static IP configuration
- Sync Source
- gNB configuration
- RF Antenna
- VLAN
- Static Routing

Cancel

OK

If the network setting of the Askey 5G NR Small Cell is wrong or you cannot get the current IPv4 address, such that you cannot access the Admin Website by IPv4. You can use the MAC to IPv6 link-local address to

access the Admin Website by the URL **`http://[IPv6 Link-Local Address]/`** in the same LAN. Please check the topic **“Access the Admin Website by IPv6 Link-Local Address”** in chapter 4. Or, if the Askey 5G NR Small Cell is near you, you can hold the reset button for more than 15 seconds and release, it will trigger the device to perform the factory reset. The following illustration is the reset button location of the device. After performing the factory reset, the Askey 5G NR Small Cell will get the IPv4 address from the DHCP server.



3.5 Configuration

3.5.1 Dashboard

This Askey 5G NR Small Cell Dashboard page shows the integrated small cell information, including the service and location data.

Figure 40. The Askey 5G NR Small Cell Dashboard Page

Home	
Connected Devices	
Settings	
Configuration	
Dashboard	
gNB	
Neighbor Cell	
RF Antenna	
VLAN	

Configuration: Dashboard

gNB IP Address	N2/N3: 10.1.108.156
Cell State	In Service
Active UEs	0
GNSS Fixed Status	Location Acquired
Sync Capability	GPS
Sync State	DISP
Ping Status	<div> <div></div> AMF (10.1.106.51) </div> <div> <div></div> EMS (acs6.askey.ga) </div>


Table 10. The Askey 5G NR Small Cell Dashboard

Items	Descriptions
gNB IP Address	The IP address of gNodeB. Support separately specifying the gNB local interface with AMF (N2 interface) and the UPF (N3 interface) on the gNB configuration page. The IP address is the same value for the N2 and N3 interfaces by default.
Cell State	The current state of the small cell. It will be Not In-Service or In-Service
Active UEs	The number of wireless devices (phone, tablets, or other data devices) currently connected to the Askey 5G NR Small Cell
GNSS Fixed Status	The fixed status of GNSS. It will be Searching signal or Location Acquired
Sync Capability	The sync capability of the device
Sync State	It indicates the current sync state. It should be INIT , HARD_SYNC , DISP , RESYNC , or HOLDOVER . The cell processes will start until the sync state is DISP
Ping Status	Check whether the network connection status of the following server by ping command (ICMP): AMF , EMS , KPI , and SAS

3.5.2 gNB

This Askey 5G NR Small Cell gNB page shows the principal configurations of CU and DU. There are some items different between SA and NSA mode. These items on Web GUI will be read-only in the remote provision method except for gNB IP because the value of gNB IP address may be one of the physical network interfaces or VLAN interfaces.

Figure 41. The Askey 5G NR Small Cell gNB Page

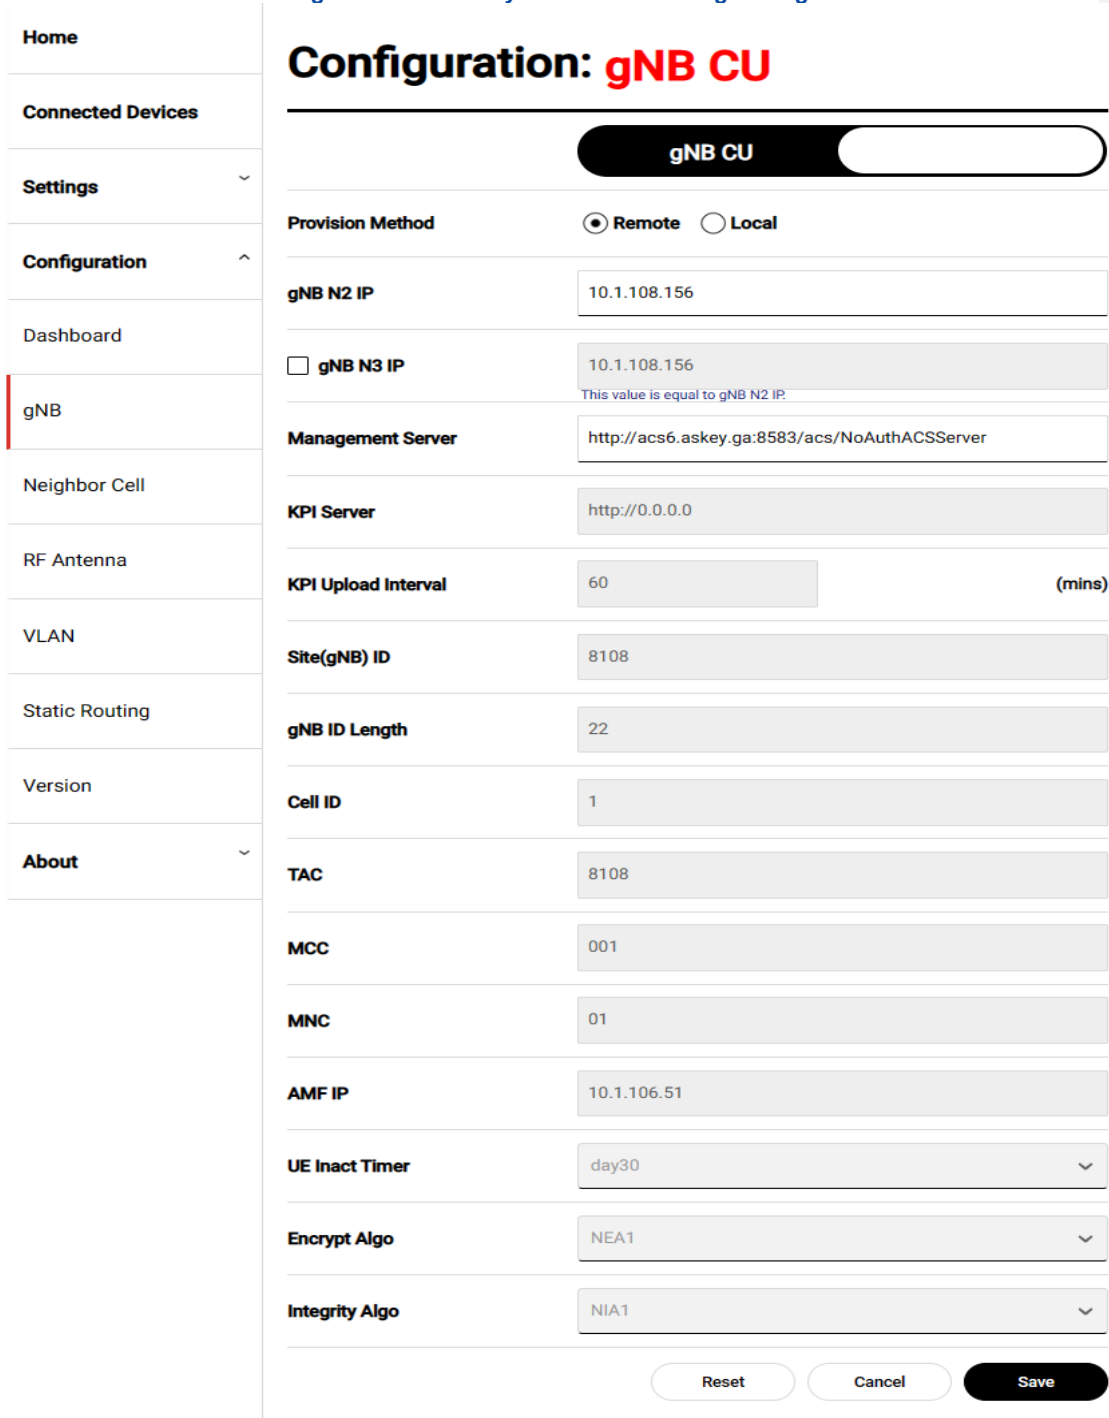

Home

Connected Devices

Settings

Configuration

Dashboard

gNB

Neighbor Cell

RF Antenna

VLAN

Static Routing

Version

About

Configuration: gNB CU

gNB CU

Provision Method

☒ Remote
 ☐ Local

gNB N2 IP

10.1.108.156

☐ gNB N3 IP

10.1.108.156

This value is equal to gNB N2 IP.

Management Server

http://acs6.askey.ga:8583/acs/NoAuthACSServer

KPI Server

http://0.0.0.0

KPI Upload Interval

60

(mins)

Site(gNB) ID

8108

gNB ID Length

22

Cell ID

1

TAC

8108

MCC

001

MNC

01

AMF IP

10.1.106.51

UE Inact Timer

day30

Encrypt Algo

NEA1

Integrity Algo

NIA1


Reset

Cancel

Save

You can change the local provision method by clicking the option **Local** in the Provision Method. After modifying the configurations, you can save these configurations by clicking the **Save** button. If there are some wrong settings, such that the cell cannot provide the 5G NR service, you can click the Default button to restore the **default** setting.

Figure 42. The Local Provision Method in gNB Configuration

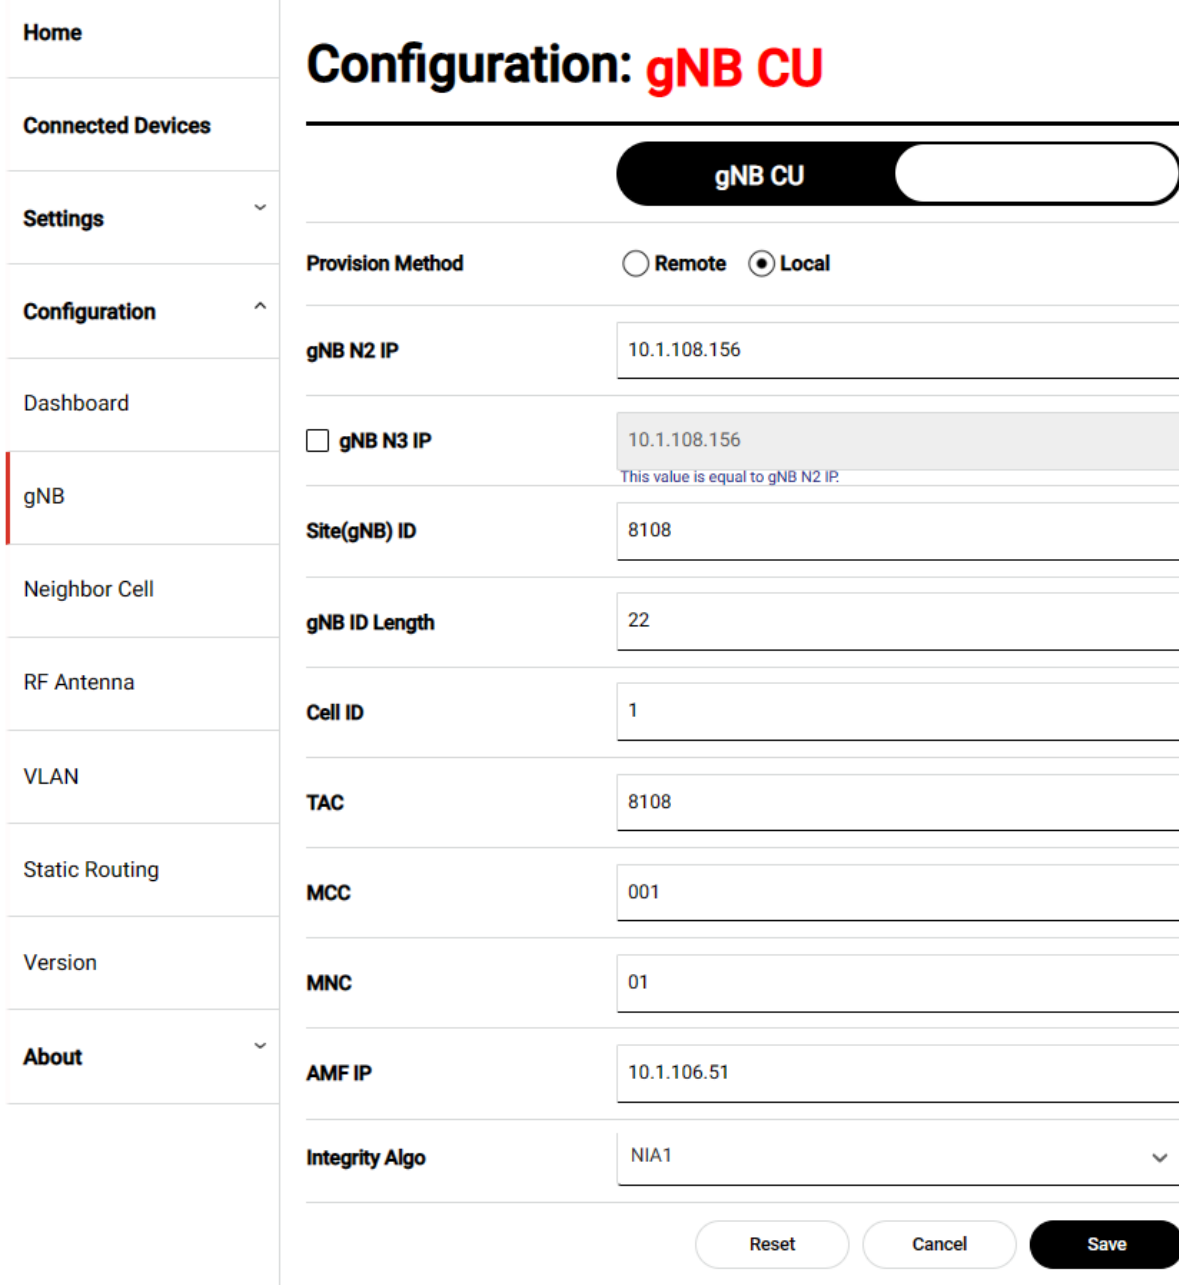

Home
Connected Devices
Settings
Configuration
Dashboard
gNB
Neighbor Cell
RF Antenna
VLAN
Static Routing
Version
About

Configuration: gNB CU

gNB CU

Provision Method
☐ Remote
☒ Local

gNB N2 IP
10.1.108.156

☐ gNB N3 IP
10.1.108.156
This value is equal to gNB N2 IP.

Site(gNB) ID
8108

gNB ID Length
22

Cell ID
1

TAC
8108

MCC
001

MNC
01

AMF IP
10.1.106.51

Integrity Algo
NIA1

Reset
Cancel
Save

After saving these configurations, the Admin Web will trigger to restart the device such that these configurations are effective. The gNB IP address is the same value for the N2 and N3 interfaces by default. You can click the check box to specify the gNB IP for N3 interface.

gNB N2 IP	10.1.108.156
<input checked="" type="checkbox"/> gNB N3 IP	10.1.108.157

According the following figure, you should check whether the gNB IP is correct based on the network setting and whether the cable connects to the WAN port, SFP+ port, or one of the VLAN IP addresses.

Figure 43. The Askey OAM Architecture

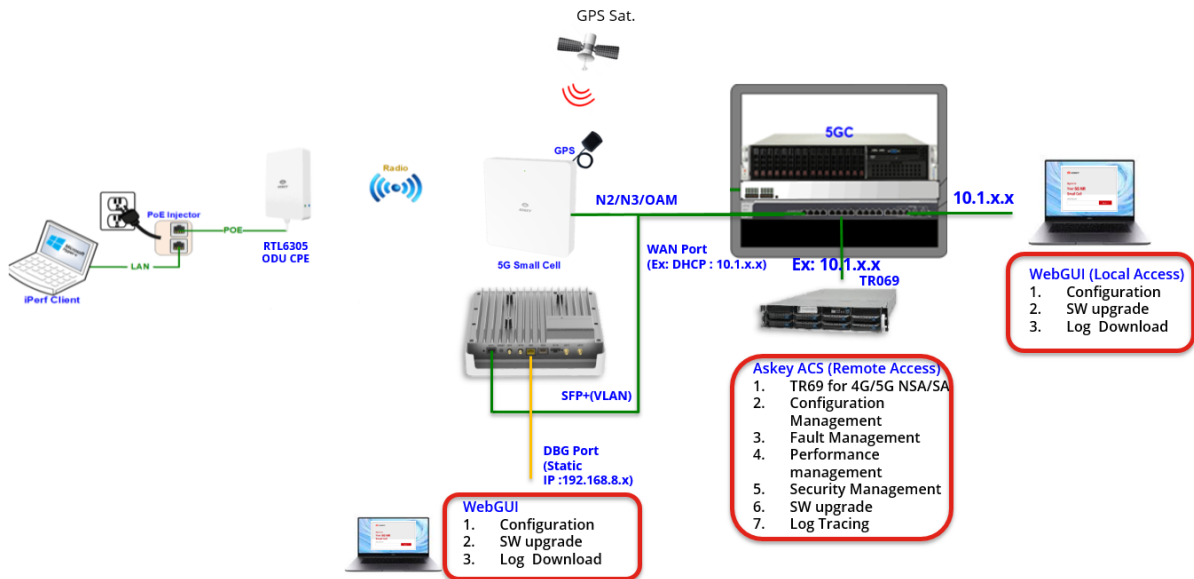


Figure 44. VLAN IP Address

Configuration: VLAN

Interface

fm1-mac9 - WAN

VLAN Interface	Tag ID	DHCP	IP Address	Action	
fm1-mac9-vlan5	5	NO	192.148.2.12	Delete	Edit
fm1-mac9-vlan22	22	YES	0.0.0.0	Delete	Edit
fm1-mac9-vlan23	23	NO	192.158.1.22	Delete	Edit

Table 11. The Askey 5G NR Small Cell CU Configuration

Items	Descriptions
Provision Method	<p>The Provision Method should be Remote or Local.</p> <ol style="list-style-type: none"> The Remote provision method means that the remote server, e.g., ACS, will provision the primary gNB configurations to the 5G NR Small Cell. The Local provision method means that the 5G NR Small Cell will apply all the configurations in the local files. Users can modify the primary gNB configurations on the Admin Web GUI.
gNB N2 IP/gNB N3 IP	The IP address of gNodeB. It should be the IP address of WAN port, SFP+ port, or one of the VLAN interfaces. Support separately specifying the gNB local interface with AMF (N2 interface) and the UPF (N3 interface) on the gNB configuration page. The IP address is the same value for the N2 and N3 interfaces by default.
Site(gNB) ID	It identifies a gNB within a PLMN.
gNB ID Length	The number of bits for encoding the gNB ID.
Cell ID	The physical-layer Cell ID of the signal. The number format
TAC	Tracking Area Code, an element of the tracking area identity (TAI) that serves to uniquely identify the Tracking Area.
MCC	Mobile Country Code
MNC	Mobile Network Code
AMF IP	The Access and Mobility Management Function IP address to carry the signaling traffic
UE Inact Timer	Duration while UE has not received or transmitted any user data
Encrypt Algo	NEA (Encryption Algorithm for 5G). It supports the NEA0 , NEA1 , NEA2 , and NEA3
Integrity Algo	EIA (EPS Integrity Algorithm). It supports the NIA1 , NIA2 , and NIA3

You can click the upper button to switch the configuration from gNB CU to gNB DU, and vice versa.

Figure 45. The Askey 5G NR Small Cell Switch CU or DU Configuration

Configuration: gNB CU

<div>gNB CU</div>	
Provision Method	<input type="radio"/> Remote <input checked="" type="radio"/> Local
gNB IP	10.1.108.156
Site(gNB) ID	8108

Configuration: gNB DU

<div>gNB DU</div>	
Provision Method	<input type="radio"/> Remote <input checked="" type="radio"/> Local
SST	1
SD	<div>Enabled</div> <div>66051</div>

There are many items in the DU configuration tab; they can be split by Common Items, Bandwidth Profile, NR ARFCN Profile, and Time Slot Profile.

Figure 46. The Askey 5G NR Small Cell DU Configuration – Common Items

Configuration: gNB DU

<div>gNB DU</div>	
Provision Method	<input type="radio"/> Remote <input checked="" type="radio"/> Local
SST	1
SD	<div>Enabled</div> <div>66051</div>
NR Band	77
Physical Cell ID	112
Uplink Layer	<input checked="" type="radio"/> One Layer <input type="radio"/> Two Layers
UL Dmrs-AdditionalPosition	<input type="radio"/> Position 1 <input checked="" type="radio"/> Position 2
QRxLevMin	-50
QQualMin	-30

Table 12. The Askey 5G NR Small Cell DU Configuration – Common

Items	Descriptions
SST	Slice/Service Type, refers to the expected Network Slice behavior in terms of features and services
SD	Slice Differentiator, complements the SST to differentiate amongst multiple Network Slices of the same SST. The SD value can be disabled for the standardized S-NSSAI that has only SST.
NR Band	Frequency bands for 5G New Radio. It supports the N48, N77 and N78
Physical Cell ID	Physical Cell identifier, is used to distinguish cells on the radio side. The value must be small than 512.
Uplink Layer	The channel over which a symbol on the antenna port is conveyed can be inferred from the channel over which another symbol on the same antenna port is conveyed.
UL Dmrs-AdditionalPosition	Position for additional demodulation reference signal (DMRS) in uplink.
QRxLevMin	Minimum required RX level in the cell (dBm)
QQualMin	Minimum required quality level in the cell (dB)

If the device supports the NR Band 48, the SAS Provider item will display in the CU configuration as the NR band is modified to 48.

Figure 47. The Askey 5G NR Small Cell DU Configuration – Bandwidth Profile

Configuration: gNB DU

gNB DU

Provision Method
☐ Remote
☒ Local

SST

SD

NR Band

Physical Cell ID

Figure 48. The Askey 5G NR Small Cell DU Configuration – SAS Provider

Configuration: gNB CU

gNB CU

Provision Method
☐ Remote ☒ Local

SAS Provider

Site(gNB) ID

gNB ID Length

Cell ID

Federated Wireless ^

Disable

✓ Federated Wireless

Google

After rebooting the 5G NR Small Cell, the device will perform the normal SAS-CBSD procedures. The related messages can be captured by Wireshark with the following capture filter:

host 10.1.108.156 and udp port 17054


Capture

...using this filter: host 10.1.108.156 and udp port 17054

VirtualBox Host-Only Network
 HostOnly

WAN


 Adapter for loopback traffic capture
 區域連線* 10



Capturing from WAN (host 10.1.108.156 and udp port 17054)

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	10.1.108.156	255.255.255.255	UDP	814	40933 → 17054 Len=772
2	1.998030	10.1.108.156	255.255.255.255	UDP	139	46744 → 17054 Len=97
3	4.269195	10.1.108.156	255.255.255.255	UDP	269	55669 → 17054 Len=227
4	6.140853	10.1.108.156	255.255.255.255	UDP	807	42978 → 17054 Len=765
5	8.294572	10.1.108.156	255.255.255.255	UDP	307	44932 → 17054 Len=265
6	10.151894	10.1.108.156	255.255.255.255	UDP	259	32938 → 17054 Len=217
7	12.989377	10.1.108.156	255.255.255.255	UDP	274	53117 → 17054 Len=232
8	206.540265	10.1.108.156	255.255.255.255	UDP	277	55124 → 17054 Len=235
9	208.575108	10.1.108.156	255.255.255.255	UDP	246	53143 → 17054 Len=204

For check the content of the SAS-CBSD procedures, you can click the right mouse on the raw data and choose the item “**Show Packet Bytes**”.

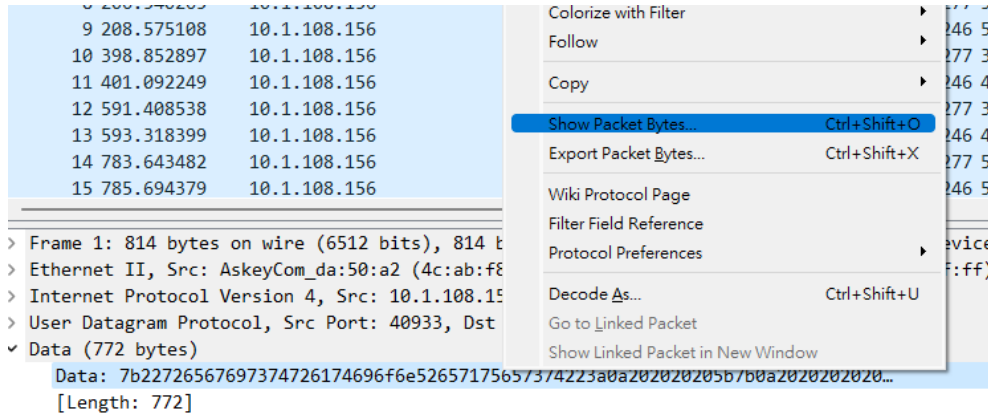

The message content will be displayed on the new window of the Wireshark as the following illustration:

Wireshark · Data (data.data) · WAN (host 10.1.108.156 and udp port 17054)

```
{
  "registrationRequest": {
    [
      {
        "cbsdSerialNumber": "84301498175650",
        "fccId": "Askeyfccid22A",
        "userId": "MdwtmV",
        "cbsdCategory": "A",
        "airInterface": {
          "radioTechnology": "NR"
        },
        "measCapability": [""],
        "installationParam": {
          "latitude": 62.5,
          "longitude": -155.5,
          "heightType": "AGL",
          "height": 1.0,
          "antennaGain": 5,
          "eirpCapability": 29,
          "indoorDeployment": true
        },
        "cbsdInfo": {
          "vendor": "Askey Corporation",
          "model": "SCE2120",
          "softwareVersion": "v2.2.008.685",
          "hardwareVersion": "SCE2120_ES0",
          "firmwareVersion": "0.4.6.48.ev0"
        }
      }
    ]
  }
}
```

In the bandwidth and NR ARFCN configurations, the Admin Website provides the supported item for each NR band. After choosing the profile option, the recommended values will be filled in the related items. For the more configurations, you can read the Chapter “**The Recommend NR ARFCN Configuration**” in the bottom of this document.

For the NR ARFCN, the Admin Website provide some profile options, and the recommended values will be filled in the related items. For the more configurations, you can read the Chapter “**The Recommend NR ARFCN Configuration**” in the bottom of this document.

Figure 49. The Askey 5G NR Small Cell DU Configuration – NR ARFCN

NR ARFCN

Profile	3.52G
DL NR ARFCN	635208
UL NR ARFCN	635208
DL CenterFreq	3528120
UL CenterFreq	3528120
DL AbsArfcnPointA	633936
UL AbsArfcnPointA	633936
DL AbsFreqPointA	3509040
UL AbsFreqPointA	3509040
AbsArfcnSsb	634464
AbsFreqSsb	3516960


Table 13. The Askey 5G NR Small Cell DU Configuration – Bandwidth and NR ARFCN

Items	Descriptions
Bandwidth Profile	N48 : 20/30/40 MHz N78 : 20/30/40/50/60/70/80/90/100MHz N77 : 40/50/60/70/80/90/100MHz
ARFCN Profile	It provides the recommended ARFCN configuration
DL NR ARFCN	The downlink NR ARFCN of the whole bandwidth
UL NR ARFCN	The uplink NR ARFCN of the whole bandwidth
DL CenterFreq	The downlink center frequency value in KHz
UL CenterFreq	The uplink center frequency value in KHz
DL AbsFreqPointA	The downlink absolute frequency point A configuration in KHz
UL AbsFreqPointA	The uplink absolute frequency point A configuration in KHz
DL AbsArfcnPointA	The downlink absolute ARFCN point A configuration
UL AbsArfcnPointA	The uplink absolute ARFCN point A configuration
AbsFreqSsb	The absolute frequency SSB configuration in KHz
AbsArfcnSsb	The absolute ARFCN SSB configuration

For the Time Slot Format, the Admin Website provides some typical profiles and the recommended value of the related items. You can click the profile option, and the related values will be filled in these detailed items.

Figure 50. The Askey 5G NR Small Cell DU Configuration – Time Slot Profile

Time Slot Format

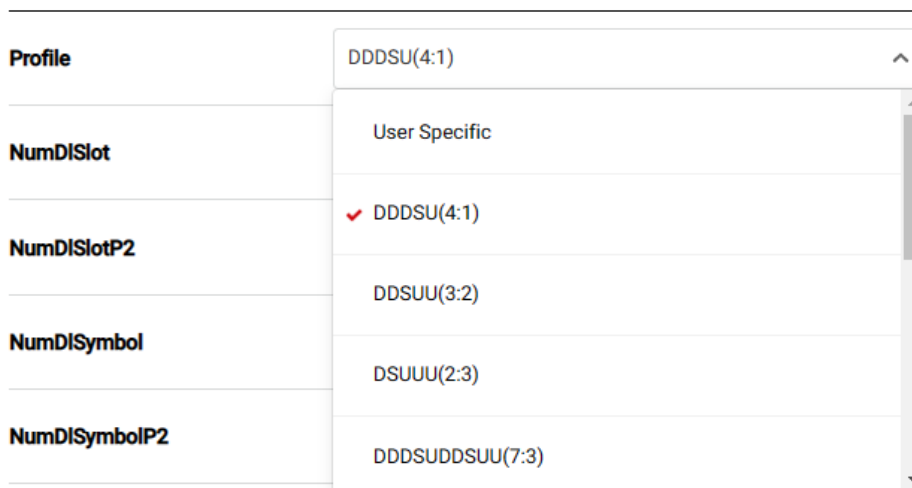

Profile DDSU(4:1)

NumDISlot

NumDISlotP2

NumDISymbol

NumDISymbolP2

Figure 51. The Askey 5G NR Small Cell DU Configuration – Time Slot Parameters

Time Slot Format

Profile	DDDSU(4:1) ▼
NumDISlot	3
NumDISlotP2	0
NumDISymbol	10
NumDISymbolP2	0
NumUISlot	1
NumUISlotP2	0
NumUISymbol	2
NumUISymbolP2	0
P2 Pres	0
PrachCfgIdx	159
PreambleFormat	RACH_FORMAT_B4 ▼

Table 14. The Askey 5G NR Small Cell DU Configuration – Time Slot Format

Items	Descriptions
Profile	List the common time slot patterns and provide the default value for detailed setting
numDISlot	The number of downlink slots
numDISlot2	The number of P2 downlink slots
numDISymbol	The number of downlink symbols for slot format
numDISymbolP2	The number of P2 downlink symbols for slot format
numUISlot	The number of uplink slots
numUISlotP2	The number of P2 uplink slots
numUISymbol	The number of uplink symbols for slot format
numUISymbolP2	The number of P2 uplink symbols for slot format
p2Pres	The Pattern 2 (P2) presence value
PrachCfgIdx	The PRACH configuration index value
PreambleFormat	Long preamble: Format 0, 1, 2, and 3 Short preamble: Format A1, A2, A3, B1, B2, B3, B4, C0, and C2

In the NR ARFCN and Time Slot Format configurations, the detailed items will be read-only for the pre-defined profile. If the user wants to modify the detailed items, the profile should be selected to “**User Specific**”.

NR ARFCN

Profile	User Specific
DL NR ARFCN	635208
UL NR ARFCN	635208

Time Slot Format

Profile	User Specific
NumDISlot	3
NumDISlotP2	0

3.5.3 Neighbor Cell

This Askey 5G NR Small Cell Neighbor Cell displays the related gNB information, and you can modify some items in the local provision. You can also manually add the neighbor cell on the page's bottom. These items will be read-only if the device is under remote provisioning.

Figure 52. The Askey 5G NR Small Cell Neighbor Cell Page

Home

Connected Devices

Settings

Configuration

Dashboard

gNB

Neighbor Cell

RF Antenna

VLAN

Static Routing

Version

About

Configuration: Neighbor Cell

gNB IP

10.1.108.156

gNB NR Band

77

gNB AbsArfcnSsb

647232

gNB AbsArfcnPointA

DL : 646704
UL : 646704

Provision Method

Local

NeighborCell AbsArfcnSsb

647232

A3 RSRP Offset

3

A3 Hysteresis

0

A3 Timer To Trigger

MS40

☐ XN Enable

Neighbor Cell

gNB ID	Cell ID	PCI	AbsArfcnPointA	Action
				Add

If the XN Enable is checked, you can choose the server or client side for Xn handover. You should also provide the XN neighbor IP address as the following illustration:

<input checked="" type="checkbox"/> XN Enable	Server Side
XN Neighbor IP	10.1.108.111

You can add the neighbor cell by clicking the **Add** button in the Action column and fill the neighbor data on the popup window.

Add Neighbor Cell

Handover Type	Intra Handover
Neighbor gNB ID	0
Neighbor gNB ID Length	22
Neighbor Cell ID	0
Neighbor PCI	0
Neighbor TAC	0
Neighbor NR Band	77
DL AbsArfcnPointA	646704
UL AbsArfcnPointA	646704
<div> Cancel Save </div>	

The gNB ID, gNB ID Length, and Cell ID cannot all be the same value as another neighbor cell. It should be noted that the Askey 5G NR Small Cell currently doesn't support the inter handover if the **Neighbor NR Band** or the **AbsArfcnPointA** is not the same as the gNB.

Handover Type [Inter Handover](#)

The max number of neighbor cells is 4, and you can perform the delete or edit action to adjust the neighbor cells.

Neighbor Cell

gNB ID	Cell ID	PCI	AbsArfcnPointA	Action
704	12	112	DL : 646704 UL : 646704	<button>Delete</button> <button>Edit</button>
480	4	74	DL : 630480 UL : 630480	<button>Delete</button> <button>Edit</button>
112	1	1	DL : 646704 UL : 646704	<button>Delete</button> <button>Edit</button>
210	10	1	DL : 646704 UL : 646704	<button>Delete</button> <button>Edit</button>
				<button>Add</button>

Table 15. The Askey 5G NR Small Cell Neighbor Cell Configuration

Items	Descriptions
NeighborCell AbsArfcnSsb	The absolute ARFCN point A configuration of the neighbor cell
A3 RSRP Offset	The Reference Signal Received Power (RSRP) offset of event A3. The number range is -30 to 30 (dB).
A3 Hysteresis	The hysteresis value of event A3. The number range is 0 to 30 (dB).
A3 Timer To Trigger	The timer helps to avoid irregular measurement and handover. Support the following items: MS0, MS40, MS64, MS80, MS100, MS128, MS160, MS256, MS320, MS480, MS512, MS640, MS1024, MS1280, MS2560, MS5120
XN Enable	If checked, the device will enable the Xn handover. It needs to choose the server or client side for Xn handover
XN Neighbor IP	The IP address of the peer gNB on the Xn interface

3.5.4 RF Antenna

This Askey 5G NR Small Cell RF Antenna page allows users to modify the max TX power and the RF antenna path.

Figure 53. The Askey 5G NR Small Cell RF Antenna Page

Home
Connected Devices
Settings
Configuration
Dashboard
gNB
Neighbor Cell
RF Antenna

Configuration: RF Antenna

RF Power
ON

Max TX Power
24.0
(dBm)

Antenna Path
Internal

Cancel
Save

The RF Power will be N/A if the Askey 5G NR Small Cell isn't in service.

Configuration: RF Antenna

RF Power
N/A

After the cell state is in service, you can turn off the RF power. In the meantime, the MAX TX power will be read-only.

Configuration: RF Antenna

RF Power
OFF

Max TX Power
24.0
(dBm)

This max TX power is the number in one decimal place, and the range is from 0.0 to 24.0

Max TX Power
0.0
(dBm)

The number range is 0 to 24


This antenna path can be **Internal** or **External**. If the antenna path is switched to External, the RF signal will be transmitted through the **external** antenna connector as the illustration:



3.5.5 VLAN

This Askey 5G NR Small Cell VLAN page allows users to create, read, update and delete the VLAN (Virtual Local Area Network) configurations.

Figure 54. The Askey 5G NR Small Cell VLAN Page

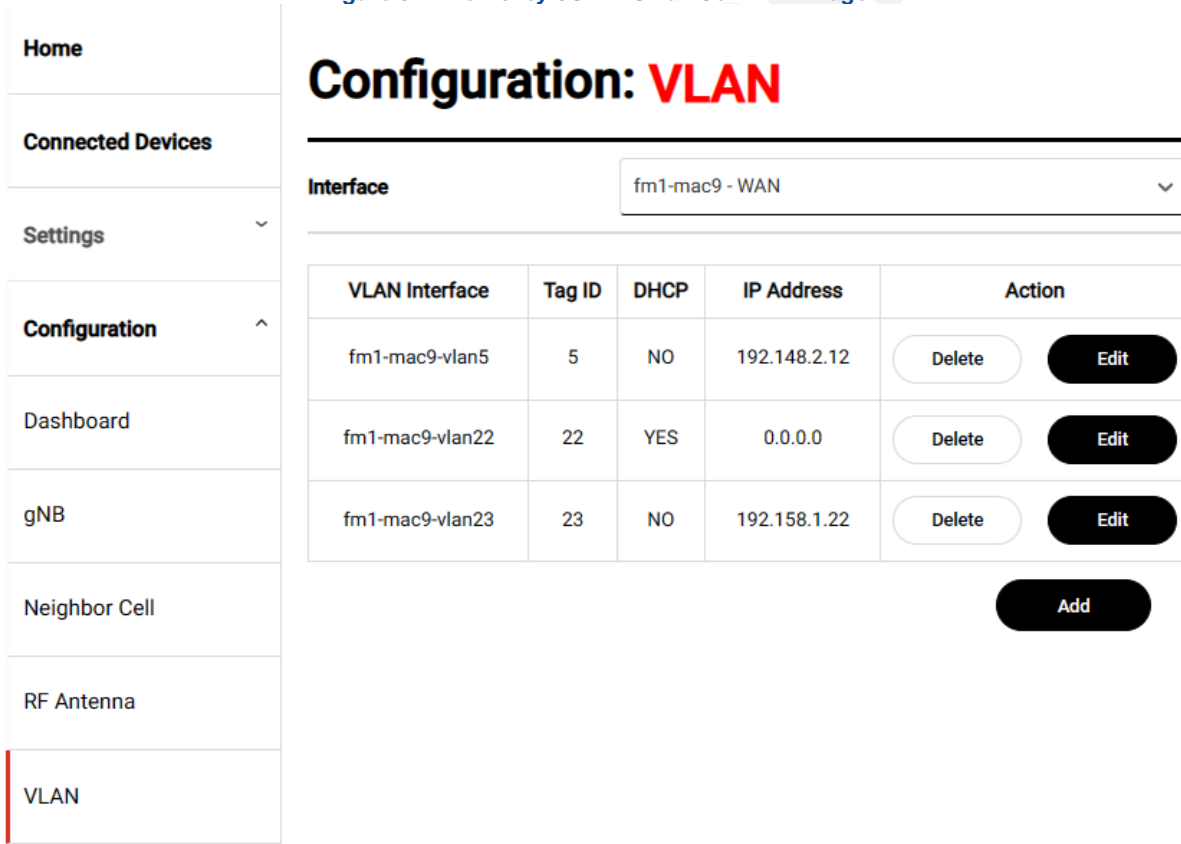

VLAN Interface	Tag ID	DHCP	IP Address	Action
fm1-mac9-vlan5	5	NO	192.148.2.12	Delete Edit
fm1-mac9-vlan22	22	YES	0.0.0.0	Delete Edit
fm1-mac9-vlan23	23	NO	192.158.1.22	Delete Edit

Add

At first, you should choose which physical network interface the VLAN attaches. When the interface is changed, the related VLAN configurations attached on the physical network interface will be displayed on the page.

Interface

fm1-mac9 - WAN

✓ fm1-mac9 - WAN

fm1-mac10 - SFP+

VLAN Interface	Tag ID
fm1-mac9-vlan5	5

Figure 55. The Askey 5G NR Small Cell VLAN Page – Read Operation

Configuration: VLAN

Interface

fm1-mac10 - SFP+

VLAN Interface	Tag ID	DHCP	IP Address	Action
fm1-mac10-vlan12	12	YES	0.0.0.0	<div>Delete</div> <div>Edit</div> <div>Add</div>

Click the **Add** button will prompt a window to create a new VLAN attached to the physical network interface. The DNS configurations are optional for the VLAN with static IP. If the DHCP is enabled, add the ignore default route option Ignore **Routes**.

Figure 56. The Askey 5G NR Small Cell VLAN Page – Create Operation

Add VLAN

Interface
fm1-mac10 - SFP+

Tag ID

☒ DHCP

IP Address

Subnet Mask

Default Gateway

Primary DNS

Secondary DNS

Cancel Save

Click the **Edit** button in the VLAN list will prompt a window to update the specified VLAN configuration.

Figure 57. The Askey 5G NR Small Cell VLAN Page – Update Operation

Configuration: VLAN

Interface
fm1-mac10 - SFP+

VLAN Interface	Tag ID	DHCP	IP Address	Action
fm1-mac10-vlan5	5	NO	192.168.100.80	Delete Edit
fm1-mac10-vlan12	12	YES	0.0.0.0	Delete Edit

Edit VLAN

Interface	fm1-mac10 - SFP+
VLAN Interface	fm1-mac10-vlan5
Tag ID	5
<input type="checkbox"/> DHCP	
IP Address	<input type="text" value="192.168.100.60"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Default Gateway	<input type="text"/>
Primary DNS	<input type="text"/>
Secondary DNS	<input type="text"/>

In addition, if the VLAN tag ID has existed in the create operation, it will become an update operation that will update the previous VLAN configuration with the tag ID.

Click the **Delete** button in the VLAN list will delete the specified VLAN configuration. It doesn't need to restart the device for the delete operation.

Figure 58. The Askey 5G NR Small Cell VLAN Page – Delete Operation

Configuration: VLAN

Interface
fm1-mac10 - SFP+

VLAN Interface	Tag ID	DHCP	IP Address	Action
fm1-mac10-vlan5	5	NO	192.168.100.60	Delete Edit
fm1-mac10-vlan12	12	YES	0.0.0.0	Delete Edit

3.5.6 Static Routing

This Askey 5G NR Small Cell Static Routing page shows the current routing table and allows users to define the static routing rules. The commands in the static routing rules need to be started with “ip route”; otherwise, the command will be ignored.

Figure 59. The Askey 5G NR Small Cell Static Routing Page

Home
Connected Devices
Settings
Configuration
Dashboard
gNB
Neighbor Cell
RF Antenna
VLAN
Static Routing

Configuration: Static Routing

Routing Table :

```
default via 10.1.106.1 dev fm1-mac9 proto dhcp src 10.1.108.156 metric 100
10.1.104.0/21 dev fm1-mac9 proto kernel scope link src 10.1.108.156
10.1.106.1 dev fm1-mac9 proto dhcp scope link src 10.1.108.156 metric 100
192.148.0.0/24 via 192.158.0.0 dev fm1-mac9-vlan23
192.158.0.0/24 dev fm1-mac9-vlan23 scope link
192.168.66.9 dev fm1-mac9-vlan5 scope link
```

Static Routing :


```
ip route add 192.168.66.9 dev fm1-mac9-vlan5
ip route add 192.158.0.0/24 dev fm1-mac9-vlan23
ip route add 192.148.0.0/24 via 192.158.0.0 dev fm1-mac9-vlan23
```


Cancel
Save

3.5.7 Version

This Askey 5G NR Small Cell Version page shows the current software, hardware, and web version. In Addition, you can upload an encoded installer with matched access code to perform a local upgrade of the Askey 5G NR Small Cell.

Figure 60. The Askey 5G NR Small Cell Version Page

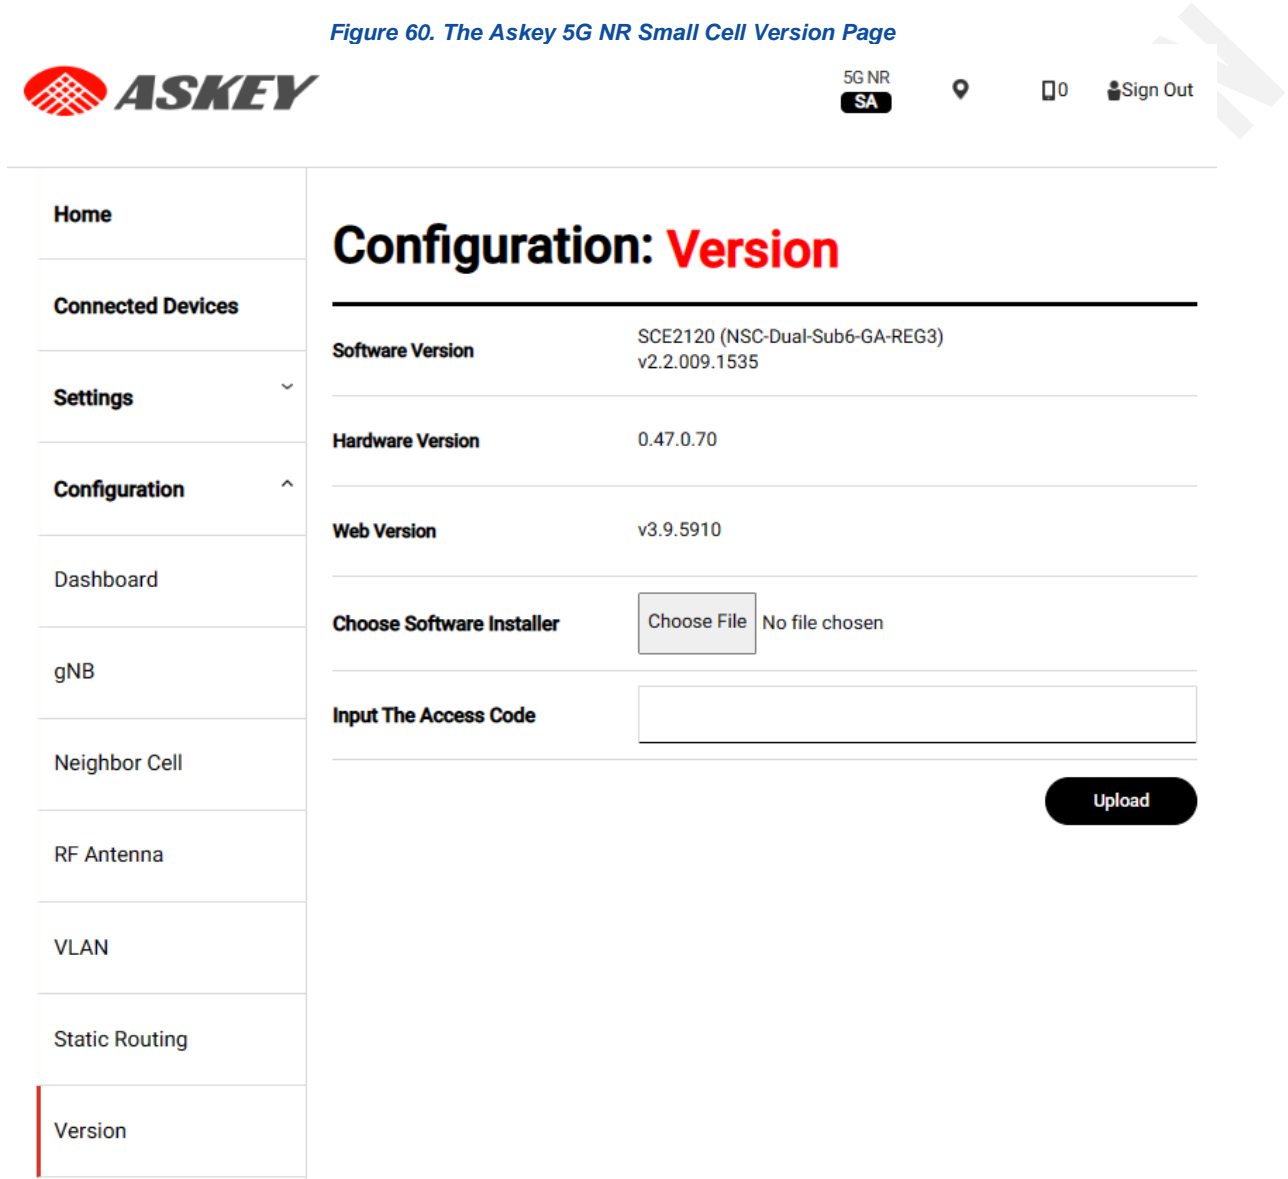



5G NR
SA

Sign Out

Home	<h2>Configuration: Version</h2> <hr/> <table> <tr> <td>Software Version</td> <td>SCE2120 (NSC-Dual-Sub6-GA-REG3) v2.2.009.1535</td> </tr> <tr> <td>Hardware Version</td> <td>0.47.0.70</td> </tr> <tr> <td>Web Version</td> <td>v3.9.5910</td> </tr> <tr> <td>Choose Software Installer</td> <td> <input type="button" value="Choose File"/> No file chosen </td> </tr> <tr> <td>Input The Access Code</td> <td> <input type="text"/> </td> </tr> <tr> <td>Dashboard</td> <td></td> </tr> <tr> <td>gNB</td> <td></td> </tr> <tr> <td>Neighbor Cell</td> <td></td> </tr> <tr> <td>RF Antenna</td> <td></td> </tr> <tr> <td>VLAN</td> <td></td> </tr> <tr> <td>Static Routing</td> <td></td> </tr> <tr> <td>Version</td> <td></td> </tr> </table> <div> <input type="button" value="Upload"/> </div>	Software Version	SCE2120 (NSC-Dual-Sub6-GA-REG3) v2.2.009.1535	Hardware Version	0.47.0.70	Web Version	v3.9.5910	Choose Software Installer	<input type="button" value="Choose File"/> No file chosen	Input The Access Code	<input type="text"/>	Dashboard		gNB		Neighbor Cell		RF Antenna		VLAN		Static Routing		Version	
Software Version		SCE2120 (NSC-Dual-Sub6-GA-REG3) v2.2.009.1535																							
Hardware Version		0.47.0.70																							
Web Version		v3.9.5910																							
Choose Software Installer		<input type="button" value="Choose File"/> No file chosen																							
Input The Access Code		<input type="text"/>																							
Dashboard																									
gNB																									
Neighbor Cell																									
RF Antenna																									
VLAN																									
Static Routing																									
Version																									

Firstly, you need to choose the encrypted software installer and input the access code provided by Askey. The installer will be uploaded to the DUT after clicking the Upload button..

Choose Software Installer

Choose File

nsc2.2_dual_aio.009ga-r...0es0es1ev1.installer.enc

Input The Access Code

8168b7fe0e454eb66720383213db6d227f9ca9bd5dd9a26e

0%

Upload

There is a progress bar to indicate the upload processing progress. When the progress is 100%, the API server will concatenate the chunked upload files and check the access code.

Choose Software Installer

Choose File

nsc2.2_dual_aio.009ga-r...0es0es1ev1.installer.enc

Input The Access Code

8168b7fe0e454eb66720383213db6d227f9ca9bd5dd9a26e

19%

Upload


If the access code is wrong, the Admin Website will provide a warning message as the following illustration. Please check the access code and upload it again with the correct code.

The access code is wrong


OK

Upload


If the access code is correct, the Admin Website will pop-up a message as the following illustration to indicate the upload is successful and the Askey 5G NR Small Cell will start to upgrade the software.

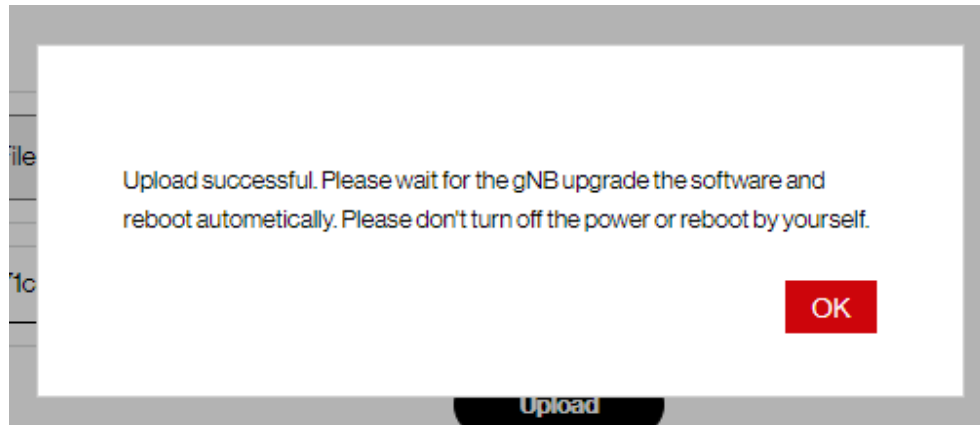

In the meantime, the API server is decoding the installer and perform the local upgrade. Therefore, if you click the “OK” button, the Web GUI cannot do other operations as in the following illustration. After finishing the upgrade, the Admin Website will provide another message as the following illustration.

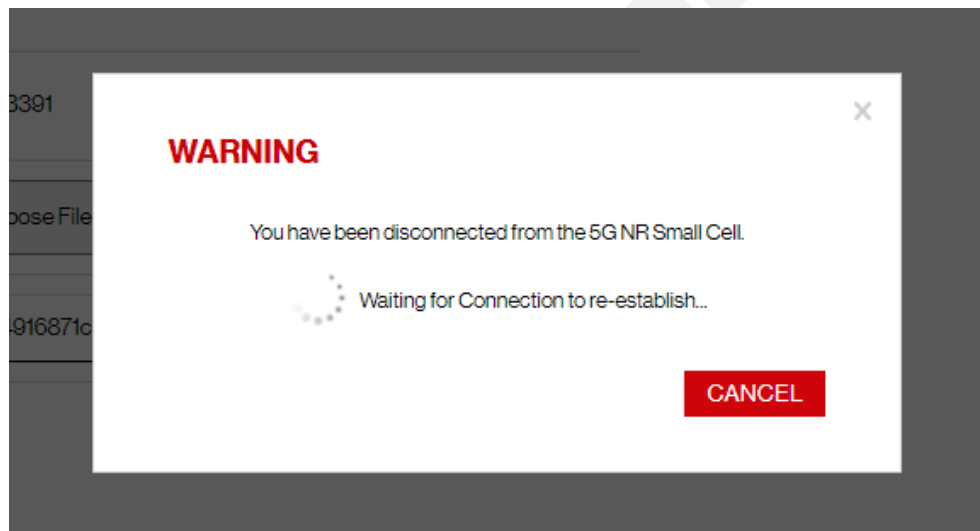

Finally, when the Admin Website provides the following message, the Askey 5G NR Small Cell startup procedure is finished. Click the “OK” button will redirect to the login form to access the Admin Website.

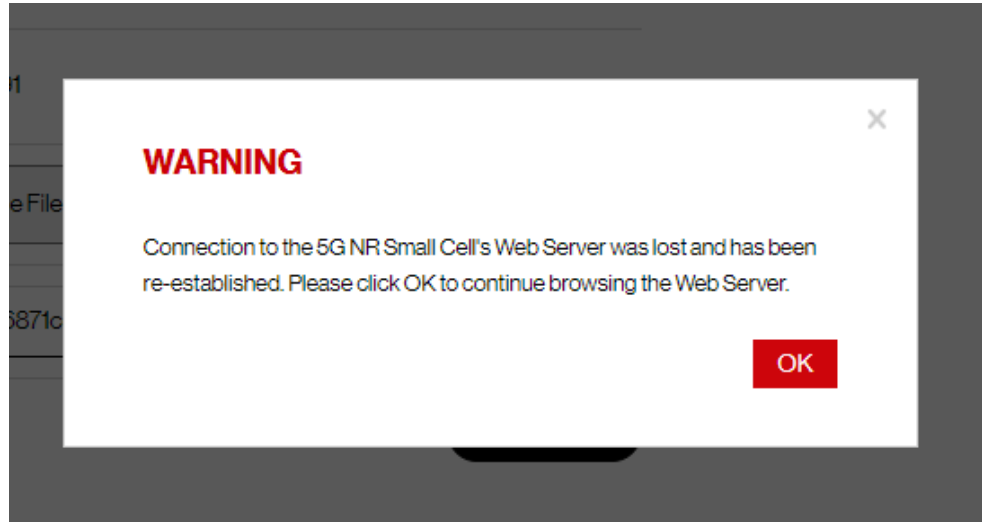

3.6 About

3.6.1 GPS

This Askey 5G NR Small Cell GPS Page shows the GPS status, including GPS Satellite ID, signal quantities, description, etc.

Figure 61. The Askey 5G NR Small Cell GPS Page

Home
Connected Devices
Settings
Configuration
About
GPS

About: GPS

Last Data Refresh 02-27-2023 12:33:00 (UTC+8)
This page will refresh every 15 seconds.

GPS

A minimum of four satellites are required to provide a GPS location fix. Please place the 5G NR Small Cell's GPS antenna in a location where there are at least four strong satellite signals in the table below.

GPS Status : Location Acquired [Map](#)

MSL Altitude : 65.2 m

GPS Satellite ID	GPS Signal Quality (dB)	Description
27	40	Strong
8	38	Strong
195	38	Strong
194	36	Strong
4	36	Strong
16	35	Strong
301	34	Strong
199	33	Strong
326	33	Strong
9	33	Strong
31	33	Strong
321	31	Strong
26	31	Strong
21	30	Fair
7	30	Fair

Strong / 31-99
Fair / 20-30
Weak / 0-19

Table 16. The Askey 5G NR Small Cell GPS

Items	Descriptions
Last Data Refresh	The local time when this page was last refreshed.
Last Data Refresh	The local time when this page was last refreshed.
GPS Status	This indicates if The Askey 5G NR Small Cell has acquired GPS signals or not. The Askey 5G NR Small Cell will not come into service if the status does not say "Location Acquired".
GPS Satellite ID	The list of GPS satellites identifies how many satellites are currently being detected along with each satellite's unique identifier.
GPS Satellite Quality (dB)	This value describes the signal-to-noise ratio for the GPS signal. A higher value means better quality. If the description is either Fair or Weak, you should consider repositioning the unit or GPS antenna. If the signal quality does not improve, an external GPS antenna may be required.
Description	Describes the quality level of the satellite signal as either: Strong, Fair or, Weak. Refer to the legend for the mapping.

Chapter 4 The Askey 5G NR Small Cell Support Utilities

4.1 Small Cell Log Download Mechanism

You can download the runtime or backup log files by the following HTTPS linking URL and send them back to the Askey Small Cell team to analyze.

PS:

1. Please don't modify the downloaded file name
2. Please don't download two log files at the same time

Backup Log Illustration: (The max page size is 3)



The Askey 5G NR Small Cell

Runtime Log:

<https://<ip address>/api/logs/TwpEceURn15qxDYSW88IJddB7LAsiOr64HNg>

Backup Log:

<https://<ip address>/api/logs/TwpEceURn15qxDYSW88IJddB7LAsiOr64HNg/<page size>>

<https://<ip address>/api/logs/TwpEceURn15qxDYSW88IJddB7LAsiOr64HNg/<page size>/<page no>>

Examples:

<https://10.1.108.15/api/logs/TwpEceURn15qxDYSW88IJddB7LAsiOr64HNg>

→ **Runtime log:**

[askeylog_280375459184643_20221025-092816_nsc.tgz.enc](#)

<https://10.1.108.15/api/logs/TwpEceURn15qxDYSW88IJddB7LAsiOr64HNg/3>

→ **Backup log (page size 3, page no 1):**

[askeylog_280375459184643_20221025-092825_nsc_last_01-03.tgz.enc](#)

<https://10.1.108.15/api/logs/TwpEceURn15qxDYSW88IJddB7LAsiOr64HNg/3/3>

→ **Backup log (page size 3, page no 3):**

[askeylog_280375459184643_20221025-092902_nsc_last_07-09.tgz.enc](#)

4.2 Access the Admin Website by IPv6 Link-Local Address

If the network setting of the Askey 5G NR Small Cell is wrong or you cannot get the current IP address, you cannot access the Admin Website by IPv4. You can use the MAC to IPv6 Converter (<https://nettools.club/mac2ipv6>) to get the link-local address of the Askey 5G NR Small Cell. After that, you can access the Admin Website by the URL `http://[IPv6 Link-Local Address]/` in the same LAN.

For example, if the MAC address is “FE:FF:FF:A6:00:03”, you can get the following result by converter.

Just fill in one of the fields and the second will update automatically.

MAC Address:	<input type="text" value="FE:FF:FF:A6:00:03"/>
IPv6 Link-local:	<input type="text" value="fe80::fcff:ffff:fea6:3"/>

Then, you can access the Admin Website by the URL `http://[fe80::fcff:ffff:fea6:3]/` in the same LAN. If you access the Admin Website by the method for the first time, it may need more than one time refresh to finish the IPv6 Neighbor Discovery.

4.3 The Recommend NR ARFCN Configuration

5G Sub6G Band N48

NR ARFCN Profile	40 MHz 3.57G	30 MHz 3.56G	20 MHz 3.62G		
DL Earfcn	637992	637656	641652		
UL Earfcn	637992	637656	641652		
DL CenterFreq	3569880	3564840	3624780		
UL CenterFreq	3569880	3564840	3624780		
DL AbsArfcnPointA	636720	636720	641040		
UL AbsArfcnPointA	636720	636720	641040		
DL AbsFreqPointA	3550800	3550800	3615600		
UL AbsFreqPointA	3550800	3550800	3615600		
AbsArfcnSsb	637248	636960	641280		
AbsFreqSsb	3558720	3554400	3619200		

5G Sub6G Band N77, 100MHz Bandwidth

NR ARFCN Profile	3.75G	3.675G			
DL Earfcn	649980	647772			
UL Earfcn	649980	647772			
DL CenterFreq	3749700	3716580			
UL CenterFreq	3749700	3716580			
DL AbsArfcnPointA	646704	644496			
UL AbsArfcnPointA	646704	644496			
DL AbsFreqPointA	3700560	3667440			
UL AbsFreqPointA	3700560	3667440			
AbsArfcnSsb	647232	645024			
AbsFreqSsb	3708480	3675360			

5G Sub6G Band N77, 90MHz Bandwidth

NR ARFCN Profile	3.75G	3.75G	3.6G	4.05G	
DL Earfcn	649644	649836	640044	669996	
UL Earfcn	649644	649836	640044	669996	
DL CenterFreq	3744660	3747540	3600660	4049940	
UL CenterFreq	3744660	3747540	3600660	4049940	
DL AbsArfcnPointA	646704	646896	637104	667056	
UL AbsArfcnPointA	646704	646896	637104	667056	
DL AbsFreqPointA	3700560	3703440	3556560	4005840	
UL AbsFreqPointA	3700560	3703440	3556560	4005840	
AbsArfcnSsb	647232	647424	637632	667584	
AbsFreqSsb	3708480	3711360	3564480	4013760	

5G Sub6G Band N77, 80MHz Bandwidth

NR ARFCN Profile	4.05G				
DL Earfcn	669996				
UL Earfcn	669996				
DL CenterFreq	4049940				
UL CenterFreq	4049940				
DL AbsArfcnPointA	667392				
UL AbsArfcnPointA	667392				
DL AbsFreqPointA	4010880				
UL AbsFreqPointA	4010880				
AbsArfcnSsb	667968				
AbsFreqSsb	4019520				

5G Sub6G Band N77, 70MHz Bandwidth

NR ARFCN Profile	3.587G				
DL Earfcn	639180				
UL Earfcn	639180				
DL CenterFreq	3587700				
UL CenterFreq	3587700				
DL AbsArfcnPointA	636912				
UL AbsArfcnPointA	636912				
DL AbsFreqPointA	3553680				
UL AbsFreqPointA	3553680				
AbsArfcnSsb	637440				
AbsFreqSsb	3561600				

5G Sub6G Band N77, 60MHz Bandwidth

NR ARFCN Profile	3.675G	3.6966G	4.05G		
DL Earfcn	645000	646440	670008		
UL Earfcn	645000	646440	670008		
DL CenterFreq	3675000	3696600	4050120		
UL CenterFreq	3675000	3696600	4050120		
DL AbsArfcnPointA	643056	644496	668064		
UL AbsArfcnPointA	643056	644496	668064		
DL AbsFreqPointA	3645840	3667440	4020960		
UL AbsFreqPointA	3645840	3667440	4020960		
AbsArfcnSsb	643584	645024	669312		
AbsFreqSsb	3653760	3675360	4039680		

5G Sub6G Band N77, 50MHz Bandwidth

NR ARFCN Profile	3.587G				
DL Earfcn	639180				
UL Earfcn	639180				
DL CenterFreq	3587700				
UL CenterFreq	3587700				
DL AbsArfcnPointA	637584				
UL AbsArfcnPointA	637584				
DL AbsFreqPointA	3563760				
UL AbsFreqPointA	3563760				
AbsArfcnSsb	638112				
AbsFreqSsb	3571680				

5G Sub6G Band N77, 40MHz Bandwidth

NR ARFCN Profile	3.75G	4.05G			
DL Earfcn	649896	670008			
UL Earfcn	649896	670008			
DL CenterFreq	3748440	4050120			
UL CenterFreq	3748440	4050120			
DL AbsArfcnPointA	648624	668736			
UL AbsArfcnPointA	648624	668736			
DL AbsFreqPointA	3729360	4031040			
UL AbsFreqPointA	3729360	4031040			
AbsArfcnSsb	649152	669312			
AbsFreqSsb	3737280	4039680			

5G Sub6G Band N78, 100MHz Bandwidth

NR ARFCN Profile	3.75G	3.675G			
DL Earfcn	649980	647772			
UL Earfcn	649980	647772			
DL CenterFreq	3749700	3716580			
UL CenterFreq	3749700	3716580			
DL AbsArfcnPointA	646704	644496			
UL AbsArfcnPointA	646704	644496			
DL AbsFreqPointA	3700560	3667440			
UL AbsFreqPointA	3700560	3667440			
AbsArfcnSsb	647232	645024			
AbsFreqSsb	3708480	3675360			

5G Sub6G Band N78, 90MHz Bandwidth

NR ARFCN Profile	3.75G	3.75G	3.6G	3.75G	
DL Earfcn	649644	649836	640044	649980	
UL Earfcn	649644	649836	640044	649980	
DL CenterFreq	3744660	3747540	3600660	3749700	
UL CenterFreq	3744660	3747540	3600660	3749700	
DL AbsArfcnPointA	646704	646896	637104	647040	
UL AbsArfcnPointA	646704	646896	637104	647040	
DL AbsFreqPointA	3700560	3703440	3556560	3705600	
UL AbsFreqPointA	3700560	3703440	3556560	3705600	
AbsArfcnSsb	647232	647424	637632	647616	
AbsFreqSsb	3708480	3711360	3564480	3714240	

5G Sub6G Band N78, 80MHz Bandwidth

NR ARFCN Profile	3.75G				
DL Earfcn	649980				
UL Earfcn	649980				
DL CenterFreq	3749700				
UL CenterFreq	3749700				
DL AbsArfcnPointA	647376				
UL AbsArfcnPointA	647376				
DL AbsFreqPointA	3710640				
UL AbsFreqPointA	3710640				
AbsArfcnSsb	648576				
AbsFreqSsb	3728640				

5G Sub6G Band N78, 70MHz Bandwidth

NR ARFCN Profile	3.587G				
DL Earfcn	639180				
UL Earfcn	639180				
DL CenterFreq	3587700				
UL CenterFreq	3587700				
DL AbsArfcnPointA	636912				
UL AbsArfcnPointA	636912				
DL AbsFreqPointA	3553680				
UL AbsFreqPointA	3553680				
AbsArfcnSsb	637440				
AbsFreqSsb	3561600				

5G Sub6G Band N78, 60MHz Bandwidth

NR ARFCN Profile	3.675G	3.6966G	3.75G		
DL Earfcn	645000	646440	649992		
UL Earfcn	645000	646440	649992		
DL CenterFreq	3675000	3696600	3749880		
UL CenterFreq	3675000	3696600	3749880		
DL AbsArfcnPointA	643056	644496	648048		
UL AbsArfcnPointA	643056	644496	648048		
DL AbsFreqPointA	3645840	3667440	3720720		
UL AbsFreqPointA	3645840	3667440	3720720		
AbsArfcnSsb	643584	645024	648576		
AbsFreqSsb	3653760	3675360	3728640		

5G Sub6G Band N78, 50MHz Bandwidth

NR ARFCN Profile	3.587G				
DL Earfcn	639180				
UL Earfcn	639180				
DL CenterFreq	3587700				
UL CenterFreq	3587700				
DL AbsArfcnPointA	637584				
UL AbsArfcnPointA	637584				
DL AbsFreqPointA	3563760				
UL AbsFreqPointA	3563760				
AbsArfcnSsb	638112				
AbsFreqSsb	3571680				

5G Sub6G Band N78, 40MHz Bandwidth

NR ARFCN Profile	3.75G	3.75G			
DL Earfcn	649896	649992			
UL Earfcn	649896	649992			
DL CenterFreq	3748440	3749880			
UL CenterFreq	3748440	3749880			
DL AbsArfcnPointA	648624	648720			
UL AbsArfcnPointA	648624	648720			
DL AbsFreqPointA	3729360	3730800			
UL AbsFreqPointA	3729360	3730800			
AbsArfcnSsb	649152	649248			
AbsFreqSsb	3737280	3738720			

5G Sub6G Band N78, 30MHz Bandwidth

NR ARFCN Profile	3.75G	3.75G			
DL Earfcn	650136	650004			
UL Earfcn	650136	650004			
DL CenterFreq	3752040	3750060			
UL CenterFreq	3752040	3750060			
DL AbsArfcnPointA	649200	649068			
UL AbsArfcnPointA	649200	649068			
DL AbsFreqPointA	3738000	3736020			
UL AbsFreqPointA	3738000	3736020			
AbsArfcnSsb	649728	649632			
AbsFreqSsb	3745920	3744480			

5G Sub6G Band N78, 20MHz Bandwidth

NR ARFCN Profile		3.75G			
DL Earfcn	650004				
UL Earfcn	650004				
DL CenterFreq	3750060				
UL CenterFreq	3750060				
DL AbsArfcnPointA	649392				
UL AbsArfcnPointA	649392				
DL AbsFreqPointA	3740880				
UL AbsFreqPointA	3740880				
AbsArfcnSsb	649632				
AbsFreqSsb	3744480				